


<b>Data Create</b>	2015/08/26	<b>Release Note</b>	<input type="checkbox"/> Internal <input checked="" type="checkbox"/> External
<b>Category</b>	FAQ	<b>Product Group</b>	IAG
<b>Function</b>	RTC Alarm	<b>Related OS</b>	none
<b>Related Product</b>	UNO-2174A/78A		

**[Abstract]**

How to Use RTC Alarm to Boot up UNO-2174A/78A at Target Time.

**[Solution]**

1. Go to Advanced>APM Configuration
2. Set "Restore on AC Power Loss" to "Power On"
3. Set "Resume On RTC Alarm" to "Enabled".
4. Set "RTC Alarm Date" to "Every Day".
5. Set "System Time" to "Target boot up time".

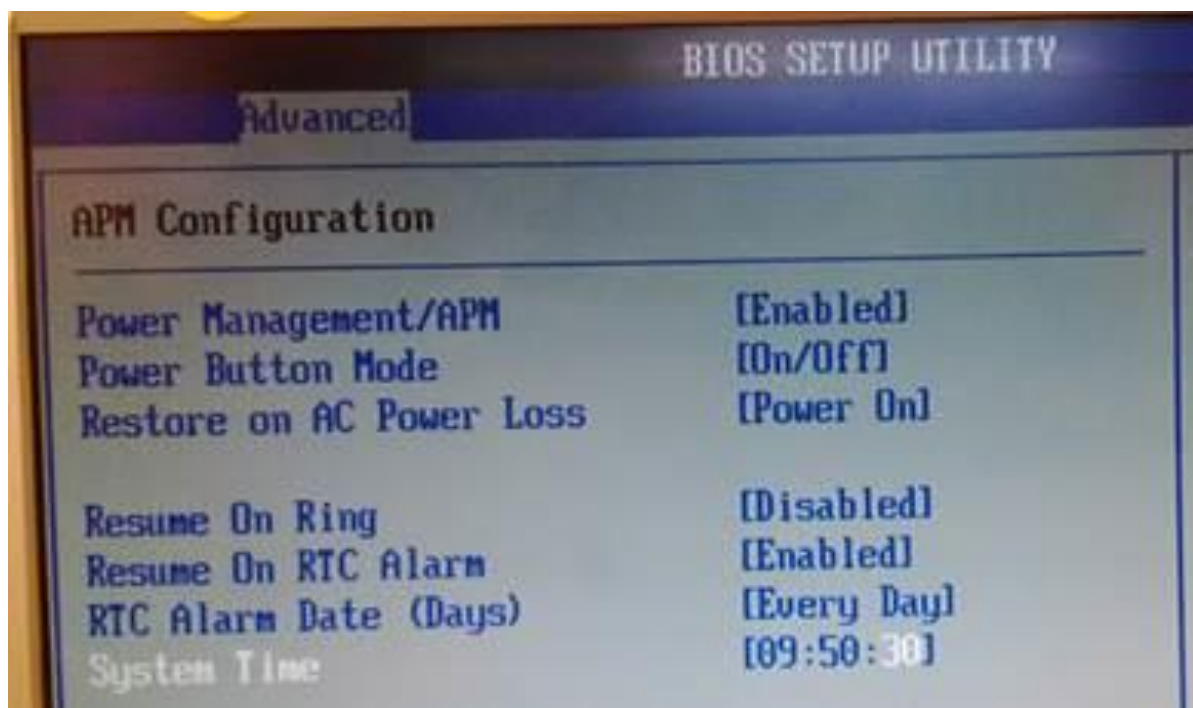

6. Go to Exit>Save Change and Exit. After entering OS, shut down UNO. The most important part is that UNO's power should not be removed. That is because of "Restore AC power loss" has set to "Power On" mode. Therefore, UNO will boot up directly while power is restored.

