

Advantech AE Technical Sharing Documentation

Date	2017 / 05 / 10	SR#	1-2918358798
Category	□ FAQ ■ SOP	Related OS	BIOS
Abstract	How to alter among RS232/422/485 in BIOS		
Keyword	BIOS / RS232 / 422 / 485		
Related Product	UNO-2473G-J3AE		


■ Problem Description:

Users get to change among RS232/422/485 in BIOS.

■ Brief Solution - Step by Step:


Step1

By pressing the Delete button to enter the BIOS. Under the **Advanced** tab, select option **IT8768E Super IO Configuration**.

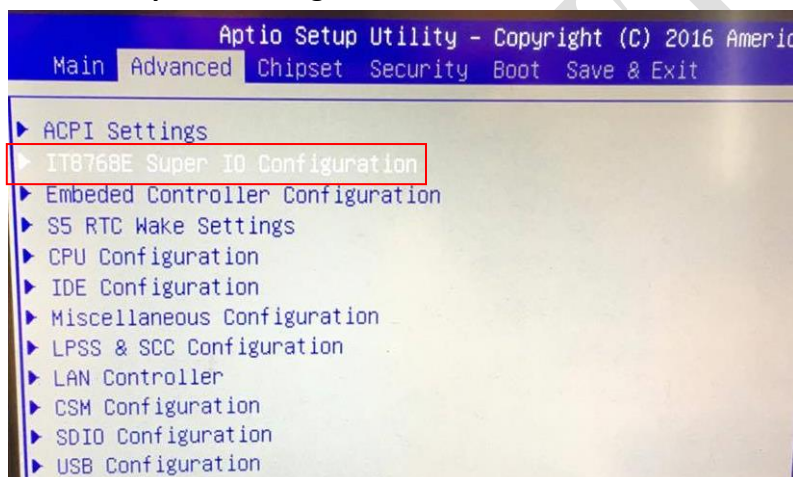


Step2

You should be able to see two options Port1,2,3,4.

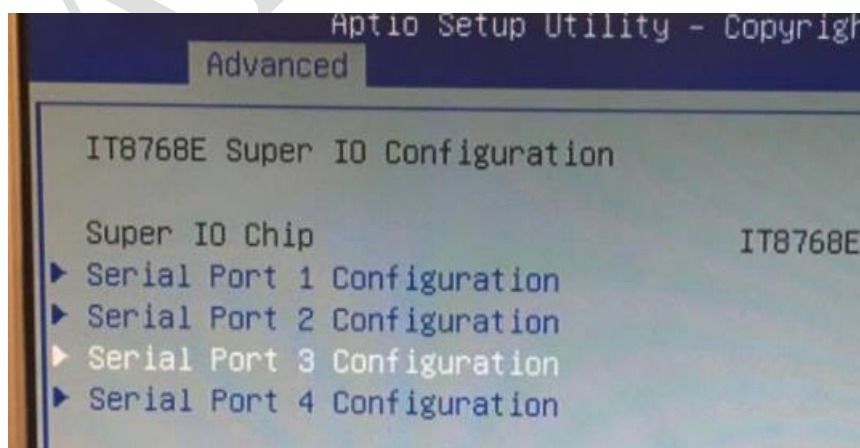

Select the standard you want.

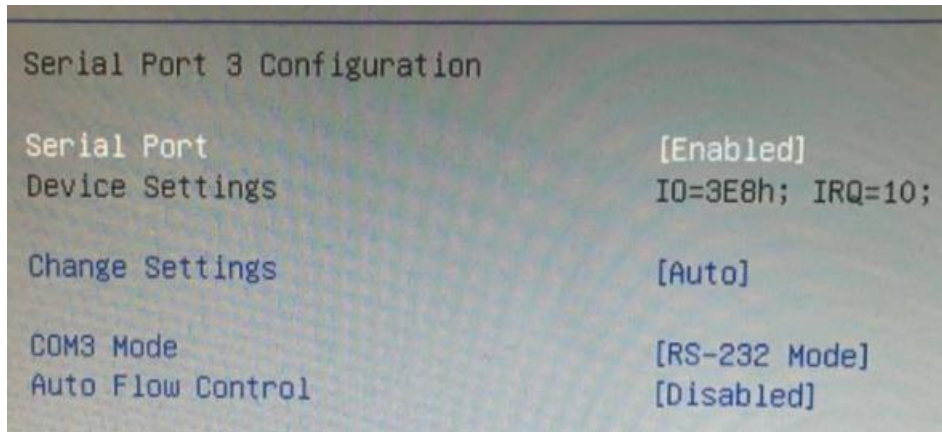

■ **References:**

N/A