

## Advantech AE Technical Share Document

Date	2018/7/31	SR#	1-3463465839
Category	■FAQ □SOP	Related OS	N/A
Abstract	How to change location of iRTU system error log for debugging		
Keyword	System, Error Log, location, debug		
Related	ADAM-3600, ECU-1152, ECU-1251		
Product			

## **■** Problem Description:

This document explains how to change location of iRTU system error log for debugging.

## Answer:

The system log may be cleared whenever system reboots, so we may not check the logs after system reboot.

The system log behavior is defined in /etc/syslog-startup.conf, user may edit by using the command "vi /etc/syslog-startup.conf".

```
root@adam3600:~# vi /etc/syslog-startup.conf
```

To prevent the messages be cleared whenever system reboot in location /var, user may change the location by modifying LOGFILE from /var/log/messages to /home/sysuser/messages.

Unmark the ROTATESIZE and ROTATEGENS to avoid messages be over-written in rotate.

```
- 0 X
172.16.12.35 - PuTTY
  This configuration file is used by the busybox syslog init script,
  /etc/init.d/syslog[.busybox] to set syslog configuration at start time.
DESTINATION=file
                                # log destinations (buffer file remote)
LOGFILE=/home/sysuser/messages # where to log (file)
REMOTE=loghost:514
                                # where to log (syslog remote)
REDUCE=no
                                # reduce-size logging
DROPDUPLICATES=no
                                # whether to drop duplicate log entries
ROTATESIZE=0
                                # rotate log if grown beyond X [kByte]
ROTATEGENS=3
                                # keep X generations of rotated logs
BUFFERSIZE=64
                                # size of circular buffer [kByte]
FOREGROUND=no
                                # run in foreground (don't use!)
LOGLEVEL=5
                                # local log level (between 1 and 8)
  /etc/syslog-startup.conf 10/13 76%
```

Press "i" to begin to edit the file. After editing, press "Esc" ":wq" to leave editing the file.

Note: The default storage size of ADAM-3600 microSD card is 1GB only. If there is no auto-cleaning the system logs, the system storage will be occupied by system logs and cause issues.