AD\ANTECH Enabling an Intelligent Planet

Advantech AE Technical Share Document

| Date | 2018/09/27 | SR# | 1-3543602411 | | | | |
|-----------------------------------|---|-----|--------------|--|--|--|--|
| Category ■FAQ □SOP Related OS N/A | | N/A | | | | | |
| Abstract | How to use ADSDIO dll file in 64 bit OS environment | | | | | | |
| Keyword | ADAM/APAX .Net Library, C++, ADSDIO, DLL, 64 bit, OS, Visual Studio | | | | | | |
| Related | | | | | | | |
| Product | All ADAM/APAX Series | | 4 | | | | |

Problem Description:

This document describes how to apply AdamApax.NET Class Library ADSDIO.DLL using Microsoft Visual Studio in 64 bit OS. When user wants to use Advantech sample codes in 64 bit OS, user needs to change the configuration manager before compiling the codes.



Answer:

Generally speaking, AdamApax.NET Class Library sample code would search "ADSDIO.dll" in the folder which related the OS where visual studio has been installed.

If the APAX-5580's OS is 64 bit, Visual Studio would search all of system folder related to 64 bit OS, like the driver folder **System32**.

However, current ADSDIO.dll in AdamApax.NET Class Library is 32 bit. After installation In 64 bit OS, ADSDIO.dll would be put in **SysWOW64** directory instead of System32. The sample code of Visual Studio 64 bit does not search SysWOW64 folder because it is not 64-related system folder. That's why sample code in 64 bit OS could not find ADSDIO.dll by default.

The following step is the way to make the 64 bit sample codes search ADSDIO.dll.

1. Choose **Configuration Manager** to make compile environment become 32bit (x86).

| 🥢 A | PA | X-Cor | ntroller-' | Win32-Sar | mple - N | licrosoft \ | /isual S | tudio (Ad | minist | rator) | | | | | |
|----------------|----|----------|------------|-----------|----------|-------------|----------|------------|------------|----------|------|----------------|-----------|---|------------|
| File | e | Edit | View | Project | Build | Debug | Data | Tools | Test | Window | He | lp | | | |
| 16 | • | <u>.</u> | · 📂 🖥 | Ø X | - b (1 | 5 10 - | (1 + | F • E | | Debug | • | x86 | | - | 👂 get api |
| : 63 | 9 | 2 2 | , A≳ 1 | i | ∎ '≙ | - P | G (J) | ः 🎣 | B (| 2 - | | Any CPU x86 | | | |
| jir . | / | APAX | -5082 | APAX-508 | 0 APA | X-5045 | APAX-0 | Controller | -Win3 | 2-Sample | APA | Configuration | Manager | | cs (Desigi |
| Server Explore | 4 | \$APA | X_5045.F | orm_APA | X_5045 | | | | | | | | | | • |
| E | | | | _ | | m_iDo | | | | | | | | | |
| (plo | | | | | | _ | | leSafe | | 1; | | | | | |
| rer | | | | | | _ | | fetyVa: | | | - | | | | |
| | | | | privat | e str | indii | m szs | LOTS:// | / Cor | tainer | OI 8 | all solt de | evice tvp | e | |

AD\ANTECH Enabli

2. Make All debug environment become x86.

| Active solution configuration: | | ctive solution platform: | | | | |
|---------------------------------------|-------------------------------|--------------------------|----------|--|--|--|
| Debug | | x86 | | | | |
| project contexts (check the project o | onfigurations to build or dep | ny CPU 86 | | | | |
| Project | Configuration | New> | | | | |
| APAX_IO_Module_Library | Debug | Edit> | V | | | |
| APAX-5013 | Debug | x86 | 1 | | | |
| APAX-5017 | Debug | x86 | 1 | | | |
| APAX-5017H | Debug | x86 | V | | | |
| APAX-5017PE | Debug | x86 | V | | | |
| APAX-5018 | Debug | x86 | V | | | |
| APAX-5028 | Debug | x86 | | | | |
| APAX-5040 | Debug | x86 | | | | |
| APAX-5040PE | Debug | x86 | | | | |
| APAX-5045 | Debug | ▼ x86 | - | | | |
| APAX-5046 | Debug | x86 | | | | |
| APAX-5046SO | Debug | x86 | V | | | |
| | | | Close | | | |

If you don't have the x86 option. Please click <New...> to create it.

| Active solution configuration: | | Active solution platform: | | | | |
|---------------------------------------|-------------------------------|---------------------------|--------------|--|--|--|
| Debug | • | x86 | | | | |
| Project contexts (check the project o | onfigurations to build or dep | Any CPU x86 | | | | |
| Project | Configuration | <new></new> | | | | |
| APAX_IO_Module_Library | Debug | <edit></edit> | V | | | |
| APAX-5013 | Debug | x86 | | | | |
| APAX-5017 | Debug | x86 | V | | | |
| APAX-5017H | Debug | x86 | | | | |
| APAX-5017PE | Debug | x86 | \checkmark | | | |
| APAX-5018 | Debug | x86 | | | | |
| APAX-5028 | Debug | x86 | | | | |
| APAX-5040 | Debug | x86 | | | | |
| APAX-5040PE | Debug | x86 | | | | |
| APAX-5045 | Debug | ▼ x86 | - | | | |
| APAX-5046 | Debug | x86 | | | | |
| APAX-5046SO | Debug | x86 | | | | |
| | | | | | | |

3. After you revise to x86, it will search all of 32-related system folder to find "ADSDIO.dll".