

Product:

ADAM-5510KW

Abstract:

The LED indicator status of ADAM-5510KW

Description:

We provide the table explaining the LED indicator status of ADAM-5510KW to help the customer debug when the ProConOS is running.

Solution:

Here is the LED indicator status table for ADAM-5510KW.

<i>ADAM-5510 PWR/RUN LED Definition</i>	RUN LED blinking	RUN LED not blinking
PWR LED blinking	<ol style="list-style-type: none">1. The program is processing.2. There is an error but this error won't cause the program to stop. (ex: IO error)	<ol style="list-style-type: none">1. The program stopped running.2. An error occurred and it will cause the program to stop (ex: watchdog, high CPU loading).
PWR LED not blinking	<ol style="list-style-type: none">1. The program is processing.2. No error	<ol style="list-style-type: none">1. The program stopped running.

The customer can refer to this table to check if there is error on ADAM-5510KW.