

Advantech AE Technical Share Document

Date	2015 / 09 / 18	SR#	
Category	<input type="checkbox"/> FAQ <input checked="" type="checkbox"/> SOP	Related OS	
Abstract	How To Remove Foam from FPM-21x0-R3AE		
Keyword	Foam, FPM-2150, FPM-2170		
Related Product	FPM-21x0-R3AE		

■ Problem Description:

How To Remove Foam from FPM-21x0-R3AE

■ Brief Solution - Step by Step:


On back side, please get screw out.




Please get screw out and remove entire back cover.



please get screw out.

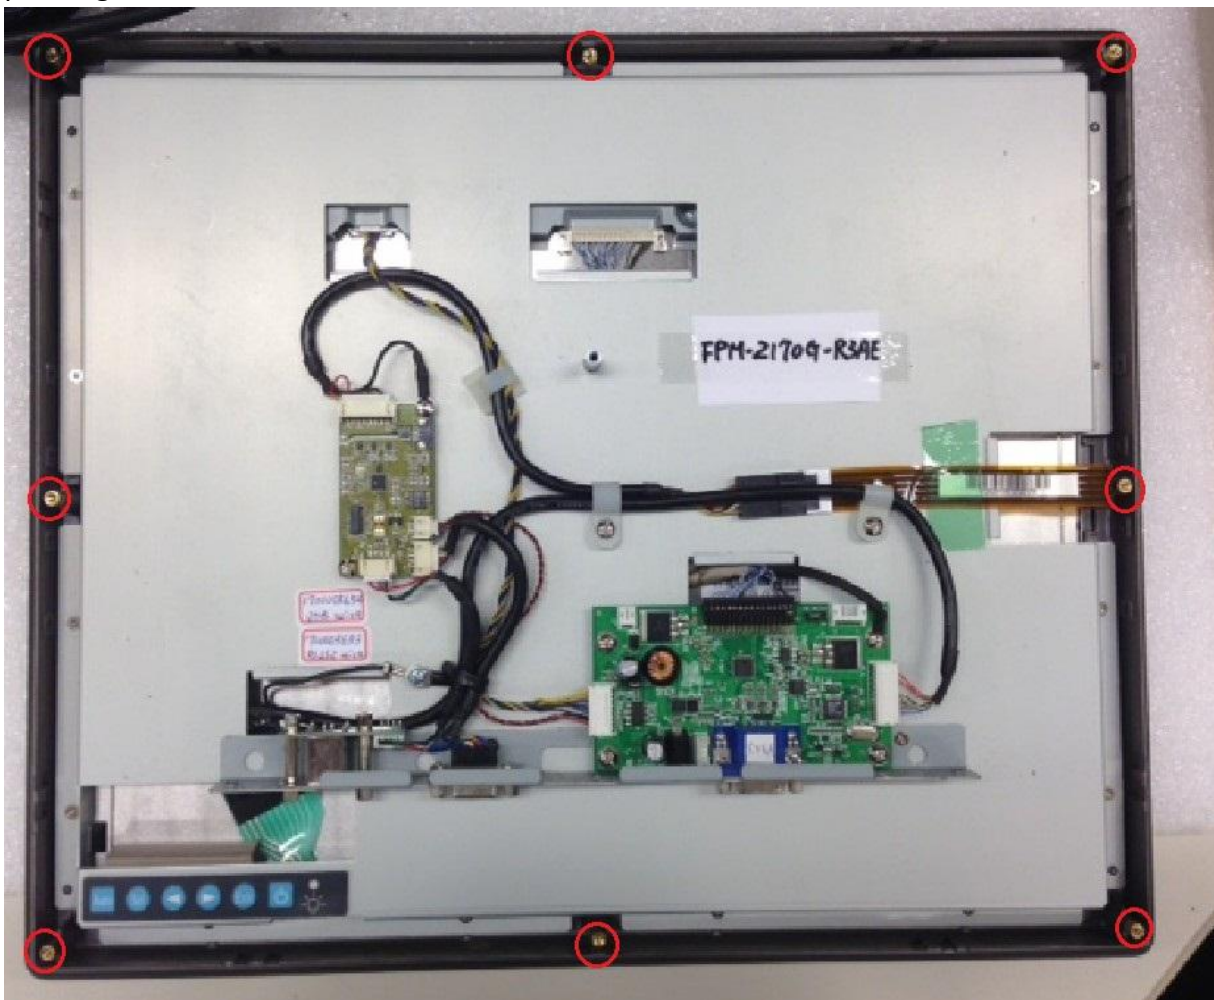

Get tape out and unplug the connector.

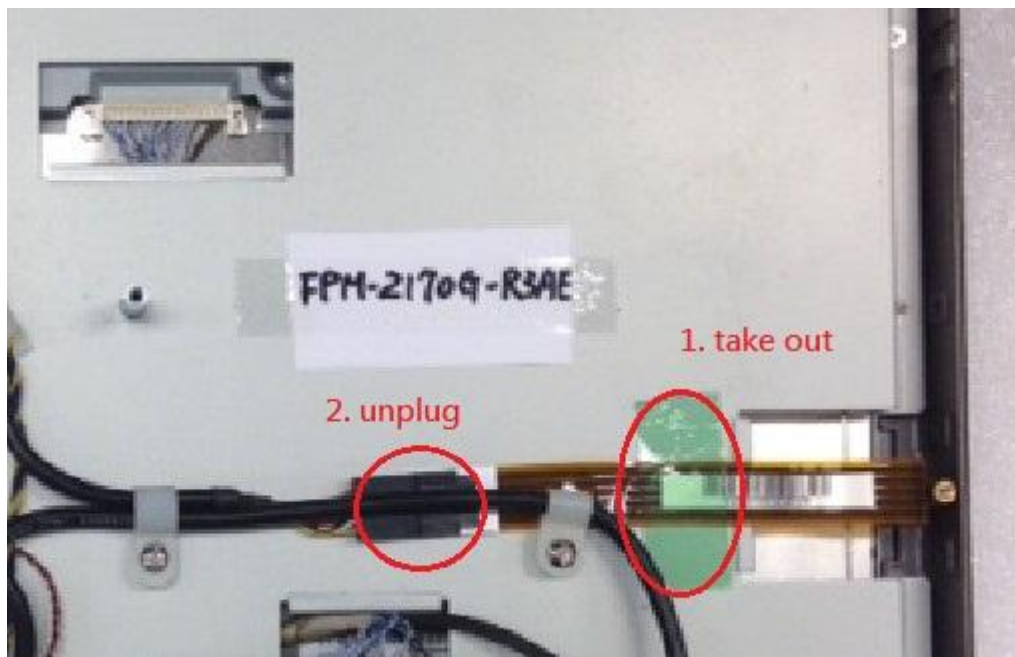

Now the Foam is available and customer could remove it directly.

