
AD\ANTECH Enabling an Intelligent Planet

Advantech AE Technical Share Document

Date	2016/04/21	SR#	1-2443749084					
Category	■FAQ □SOP	Related OS	N/A					
Abstract	ADAM-5550KW, Error code for AdvComRecv							
Keyword	MultiProg, COM port, Fu	MultiProg, COM port, Function Block, ErrorID						
Related	ADAM-5550KW, ADAM-5560KW, ADAM-5550KW/TCP, ADAM-5560KW/TCP							
Product	ADAIVI-5550KW, ADAIVI-5	SOUKVV, ADAIVI-S	SSURW/TCP, ADAIVI-SSBURW/TCP					

Problem Description:

When using the Advantech function block "AdvComRecv" to receive the data buffer from a specified COM port, the output "Error" shows there is an error with error ID 02. What's the meaning of this error ID and what to do to make the function block works successfully?

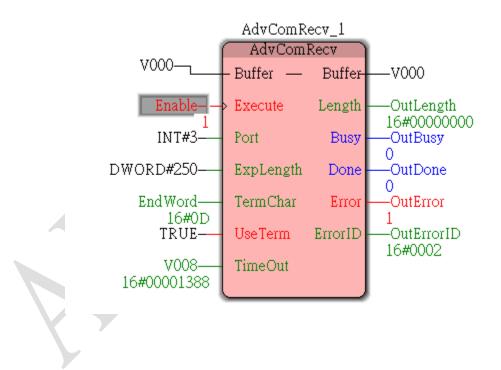

■ <u>Procedure</u>:

AD\ANTECH

Please right click on the function block and select "Help on FB/FU" to see detail help description.

Object <u>O</u> pen		
<u>D</u> ebug dialog		
Co <u>n</u> trol dialog		
Open <u>W</u> atch Window		
Add to Watch Window		
Open Logicanalyzer Winde	ow	
Add to <u>L</u> ogicanalyzer		
<u>С</u> ору	Ctrl+C	
Debug		
Open <u>i</u> nstance		
<u>P</u> owerflow		
Toggle <u>B</u> oolean Values		
Open Varia <u>b</u> les Worksheet	s	
Build Cro <u>s</u> s References		
Online La <u>v</u> out		
Help on FB/FU		Ť
	Debug dialog Control dialog Open <u>W</u> atch Window Add to Watch Window Open Logicanalyzer Windo Add to Logicanalyzer Copy Debug Open instance Powerflow Toggle Boolean Values Open Variables Worksheet Build Cross References Online Layout	Debug dialog Control dialog Open Watch Window Add to Watch Window Open Logicanalyzer Window Add to Logicanalyzer Window Add to Logicanalyzer Copy Ctrl+C Debug Open instance Powerflow Toggle Boolean Values Open Variables Worksheets Build Cross References Online Layout

According to the Error ID in the help, Error ID 2 means that the COM port is set to the mode for Modbus protocol so that it cannot receive the data from buffer.

Error ID

ErrorID	Error Description
0	Success
1	COM failed to be initialized
2	COM is only for modbus protocol
3	Invalid-COM-port-ID
4	Invalid buffer
5	Buffer is NULL
6	Invalid length
7	Invalid terminal character
8	COM is busying
9	COM failed to finished command
10	COM time out
11	COM is already configured to be slave, cannot be master
12	COM is non-active mode when backup system enable
13	Stop to read COM port because trigger AdvComClrRecv function block

ADVANTECH Enabling an Intelligent Planet

Please set the COM port into "UserDefine" mode instead of "Modbus" and test again, then COM port should be able to receive the data from buffer successfully.

Project Tree Window	₽ ▼ 🛛						AdvCon	Recy			
→ 🔄 Project : C:\Users\luke.cheng\Desktop\ADAM5550COMPort T 亩 🔄 Libraries	est					V000	Buffer —	- Buffer-	V000		
- 🙀 ADAM5550IO											
- 🙀 AdvCommun						Enable—	Execute	Length	OutLeng		
Adv ToolPack		-				1		_	16#00000	0004	×
- 🙀 AdvMotion_A1	I/O Configu	uration V3.0	0.0.31			-					
- TROCONOS			. Con	David S.C.		n . la .n : .					
COMIn	Input	Dutput Mo	tion	ron Moo	.busiCPC	Lient Set Point	Profile Pool Stru	ict Variables			
	СОМ	Baud Rate	Data Bits	Stop Bits	Parity	Time Out(ms)	Scan Time(ms)	Protocol	Server Enable	Serve) ^	
□ □ main	COM1	9600	8	1	NONE	100	500	Modbus	Disable	1	
🚺 main T	COM2	9600	0	1	NONE	100	500	Modhus	Disable	1	
main V	COM3	9600	8	1	NONE	100	500	UserDefine	Disable	1	
📑 main	COM4	9600	0	1	NONE	100	500	Modbus	Disable		
😑 📾 Physical Hardware	COM5	9600	8	1	NONE	100	500	Modbus	Disable	1	
😑 📾 Configuration : IPC_32	COM6	9600	8	1	NONE	100	500	Modbus	Disable	1 =	
😑 📹 Resource : ADV_CE	COM7	9600	8	1	NONE	100	500	Modbus	Disable	1	
🖃 🎆 Tasks	COM8	9600	8	1	NONE	100	500	Modbus	Disable	1	
Task : CYCLIC	COM9	9600	8	1	NONE	100	500	Modbus	Disable	1	
📃 main : main	COM10	9600	8	1	NONE	100	500	Modbus	Disable	1	
Global_Variables	COM11	9600	8	1	NONE	100	500	Modbus	Disable	1	
- 📰 Advantech_DAQ	COM12	9600	8	1	NONE	100	500	Modbus	Disable	1	
	COM13	9600	8	1	NONE	100	500	Modbus	Disable	1	
	COM14	9600	8	1	NONE	100	500	Modbus	Disable	1	
	COM15	9600	8	1	NONE	100	500	Modbus	Disable	1 *	
Project 🖻 POUs 🔟 Libraries 📻 Hardware 🗾 Instances										•	
	Share me	mory are all r	etained whe	n cold start							
Variable Value Default value	save all r	etain memory	to file (*.tx	t)							
[1] 16#61 [2] 16#62	file nam	e: retain		.txt		Remove B	irror Table C	reate Error Ta	ble C)K	Cancel
		_	_	_			-				P DOIL ATT
DA1 16#0D											🥑 POU: CTU