

Advantech AE Technical Share Document

Date	2016/05/27	SR#	1-2468159351
Category	□FAQ∎ SOP	Related OS	
Abstract	Set trigger activation in Advantech Inspector Express		
Keyword	Inspector Express, Trigger Activation, rising edge, falling edge		
Related Product	Inspector Express		

Problem Description:

I have set trigger activation to rising edge in camera viewer. However, after I launched Inspector Express and triggered it, trigger activation was not really be set to rising edge. How can I do?

Brief Solution - Step by Step:

- 1. Find "GEVtest.txt" file in C:\Users\ Users \AppData\Local\Advantech\InspectorExpressPC, if the file is not under this path, you could find it under C:\Program Files (x86)\Advantech\InspectorExpressPC. In addition, please make sure whether information of camera written in the file (SerialNumber = "xxxxxxx") is correct.
- 2. Open GEVtest.txt.
- 3. If you want to set trigger activation to "rising edge", add "TRIGGER_POLARITY = ACTIVE_HIGH, ACTIVE_HIGH" below the information of camera.
- 4. Save file and open Inspector Express.



Picture1: Save Solution

Reference:

1. Inspector Express