

Advantech AE Technical Share Document

Date	2016 / 9/ 22	SR#	
Category	■ FAQ □ SOP	Related OS	None
Abstract	How to set FTP server in WO	P-3000	
Keyword	FTP server, WOP-3000		
Related Product	WOP-3070, WOP-3120, WOP	P-3100	

Problem Description:

How to set FTP server in WOP-3000

- Brief Solution Step by Step:
 - 1. Use browser and enter WOP-3xxxT's IP address.



2. If first log-in, please setting the password, and Apply.

Enabling an Intelligent Planet

AD\ANTECH

0			
(5) @ http://172.16.13.24/remoteadmin/DeviceConfig.htm	D-0	🤔 Remote Admin	×
emote Admin			
Device Log On:			
To access the device, type your password and then click Log Un. Yo	ur base station p	bassword is case sensitive.	
Password:			
/erification:			
apply Cancel			

3. Enter the account number: admin and password.

ndows 安全性	E		
正在連線到1	72.16.13.24 •		
	admin	1	
	網域: ADVANTECH III 記住我的認識		
		確定	取消

4. Enter WOP3xxx, and "Apply".



Enabling an Intelligent Planet

		9 . * .
C 🛞 👩 http://172.16.13.24/remoteadmin/DeviceConfig.htm 🛛 🔎 + C 🧯	Remote Admin ×	会回
Windows CE Remote Management Tool		
Remote Admin		
Please assign your device a network name		
Device Name:		
WOP-\$120 ×		
Apply Cancel		
		~

5. Go to the Windows CE Remote Management Tool Home.

(C) (E) (E http://172.16.13	24/remoteadmin/DeviceConfig.htm 🛛 🖓 = C 🦉 172.16.13.24	× ① 余 @
Windows CE Remote	Management Tool	î
Home	Please name your device	
Device Management		
Security	Device Name:	
Add/Del Users	WOP3120	
Add/Del Share		
D Printer	There are a second	
	Apply Cancel	

6. Select "Configure FTP Server"

Enabling an Intelligent Planet

AD\ANTECH

- Co Co nttp://1/2.10.1	3.24/remoteadmin/FTPContig.htm $\mathcal{O} \neq \mathcal{O}$ SFTP Set	erver Configuration ×	fh 🛠 8
Vindows CE Remot	e Management Tool FTP Server Configuration The ftp server accepts ftp connections and allows the device to b Basic Configurations for FTP Server: Use extreme caution w Should the ftp server be misconfigured, a malicious user could your gateway. The ftp server is intended for advanced users of after any changes to the the basic configuration or the virtual connections currently active.	be configured remotely. hen configuring the ftp server. d gain complete control of the files on only. The Ftp server will be restarted roots. That will terminate any Ftp	
dd/Del Users dd/Del Share	FTP Server Enabled:	V	
Printer	Will the ftp server accept incoming connections?		
	Require Authentication:		
	Will the ftp server prompt for user name and password?		
	Allow Anonymous Users:		
	Allow users without an account on the server to login to the s	server?	
	Allow Anonymous Uploads:	V	
	Allow anonymous users to upload and change files?		
	Allow Anonymous users to virtual roots:		
	Allow Anonymous users to view and access files in virtual roo	ts?	
	Default Directory	X	
	The default directory that anonymous FTP users will log in to		
	Submit		

7. Setting "Default Directory" -> \ USB Hard Disk, and Submit, and WOP-3xxxT reboot.

Eile Edit	View Go	Favorites	4 4							
Address M	y Device									
D	9	D		D	D		0	D	₽	
Application Data	HardDisk	My Documents	Network	Program Files	System	Temp	US 3 Hard Disk	Windows	Control Panel	

ADVANTECH

Enabling an Intelligent Planet

	FTD Common Configuration		
tome	The fits consists for consistence and allows the device	a to be configured comptain	
Add/Del Network Adapter	The rtp server accepts rtp connections and allows the device	e to be configured remotery.	
SMB Server Statistics Configure FTP Server Configure TELNET Server	Basic Configurations for FTP Server: Use extreme cauti Should the ftp server be misconfigured, a malicious user your gateway. The ftp server is intended for advanced us	on when configuring the ftp server. could gain complete control of the files on sers only. The Ftp server will be restarted	
Security Add/Del Users	after any changes to the the basic configuration or the v connections currently active.	irtual roots. That will terminate any Ftp	
Add/Del Share	FTP Server Enabled:	\checkmark	
> Printer	Will the ftp server accept incoming connections?		
	Require Authentication:		
	Will the ftp server prompt for user name and password?		
	Allow Anonymous Users:		
	Allow users without an account on the server to login to	the server?	
	Allow Anonymous Uploads:		
	Allow anonymous users to upload and change files?		
	Allow Anonymous users to virtual roots:		
	Allow Anonymous users to view and access files in virtue	al roots?	
	Default Directory	VUSB Hard Disk ×	
	The default directory that anonymous FTP users will log	in to	

■ <u>Reference</u>