

Advantech AE Technical Sharing Documentation

Date	2017 / 08 / 01	SR#	1-2992624971
Category	□ FAQ ■ SOP	Related OS	N/A
Abstract	How to set between AT & ATX using SW6 on UNO-2484G		
Keyword	AT / ATX / SW6		
Related Product	UNO-2484G		

■ Problem Description:

Users get to set between AT & ATX using SW6 on UNO-2484G.


■ Brief Solution - Step by Step:

Step1

Kindly refer to P13 for the function of SW6.

SW6 AT/ATX mode switch. ON -> ATX mode, OFF -> AT mode.

Step2

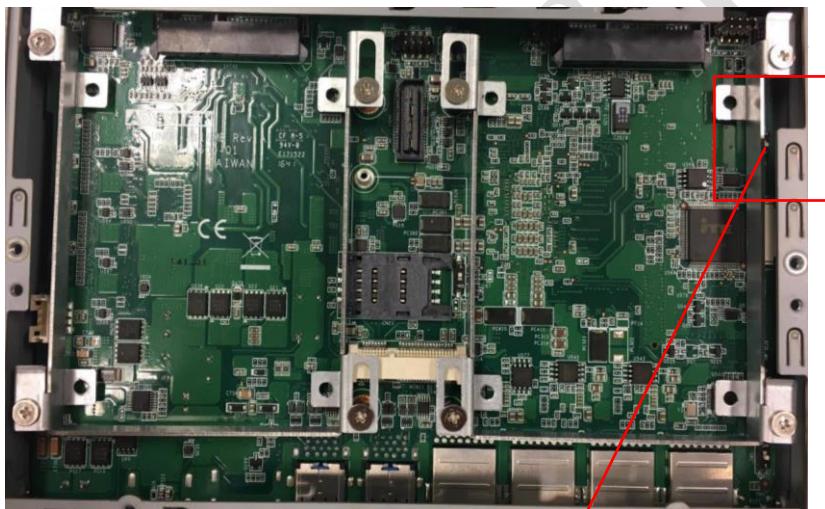

When it's ON, the system will be ATX mode.



Reference:

Online Forum Tutorial

[http://downloadt.advantech.com/ProductFile/Downloadfile1/1-1C5Z5RN/UNO-2484G_User_Manual\(ENG\)_Ed.1.pdf](http://downloadt.advantech.com/ProductFile/Downloadfile1/1-1C5Z5RN/UNO-2484G_User_Manual(ENG)_Ed.1.pdf)