# PoE Giga-MiniMc and PoE+ Giga-MiniMc

**Operation Manual** 



Above illustration is representative; different models available.



#### **FCC Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a Class A computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

#### **Limited Lifetime Warranty**

Effective for products of B+B SmartWorx shipped on or after May 1, 2013, B+B SmartWorx warrants that each such product shall be free from defects in material and workmanship for its lifetime. This limited lifetime warranty is applicable solely to the original user and is not transferable.

This warranty is expressly conditioned upon proper storage, installation, connection, operation and maintenance of products in accordance with their written specifications.

Pursuant to the warranty, within the warranty period, B+B SmartWorx, at its option will:

- 1. Replace the product with a functional equivalent;
- 2. Repair the product; or
- 3. Provide a partial refund of purchase price based on a depreciated value.

Products of other manufacturers sold by B+B SmartWorx are not subject to any warranty or indemnity offered by B+B SmartWorx, but may be subject to the warranties of the other manufacturers.

Notwithstanding the foregoing, under no circumstances shall B+B SmartWorx have any warranty obligations or any other liability for: (i) any defects resulting from wear and tear, accident, improper use by the buyer or use by any third party except in accordance with the written instructions or advice of the B+B SmartWorx or the manufacturer of the products, including without limitation surge and overvoltage conditions that exceed specified ratings, (ii) any products which have been adjusted, modified or repaired by any party other than B+B SmartWorx or (iii) any descriptions, illustrations, figures as to performance, drawings and particulars of weights and dimensions contained in the B+B SmartWorx' catalogs, price lists, marketing materials or elsewhere since they are merely intended to represent a general idea of the products and do not form part of this price quote and do not constitute a warranty of any kind, whether express or implied, as to any of the B+B SmartWorx' products.

THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEMS IN ACCORDANCE WITH THE EXPRESS WARRANTY SET FORTH ABOVE IS B+B SMARTWORN' SOLE OBLIGATION UNDER THIS WARRANTY. THE WARRANTY CONTAINED IN THIS SECTION SHALL EXTEND TO THE ORIGINAL USER ONLY, IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL SUCH WARRANTIES AND INDEMNITIES ARE EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION (I) THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY AND (II) ANY WARRANTY THAT THE PRODUCTS ARE DO NOT INFRINGE OR VIOLATE THE INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY. IN NO EVENT SHALL B+B SMARTWORX BE LIABLE FOR LOSS OF BUSINESS, LOSS OF USE OR OF DATA INTERRUPTION OF BUSINESS, LOST PROFITS OR GOODWILL OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES. B+B SMARTWORX SHALL DISREGARD AND NOT BE BOUND BY ANY REPRESENTATIONS, WARRANTIES OR INDEMNITIES MADE BY ANY OTHER PERSON, INCLUDING WITHOUT LIMITATION EMPLOYEES, DISTRIBUTORS, RESELLERS OR DEALERS OF B+B SMARTWORX WHICH ARE INCONSISTENT WITH THE WARRANTY, SET FORTH ABOVE.

# **Table of Contents**

FCC Radio Frequency Interference Statement	ii
Limited Lifetime Warranty	ii
About the PoE Giga-MiniMc	1
Installation	
DIP Switch Configuration SFP and 1x9	2
LED Operation SFP and 1x9	4
Powering Option	
DIN Rail and Wallmount Bracket	6
DC Power Supply Precautions	8
Troubleshooting	8
Specifications for the PoE Giga-MiniMc	10
About the PoE+ Giga-MiniMc	
Installation	
DIP Switch Configuration SFP and 1x9	13
LED Operation SFP and 1x9	
Powering Options	17
DIN Rail and Wallmount Bracket	18
DC Power Supply Precautions	19
Troubleshooting	19
RJ-45 Pinouts	20
Specifications for the PoE+ Giga-MiniMc	21
PoE Precautions (For Inside-a-Building Installation ONLY)	
B+B SmartWorx	22
Fiber Optic Cleaning Guidelines	23
Electrostatic Discharge Precautions	24
Safety Certifications	

#### About the PoE Giga-MiniMc

The PoE Giga-MiniMc is a solution for private network applications that require power over Ethernet for locations inside buildings where PoE is required to power an Ethernet device. The standalone unit offers a model with one SFP or fixed fiber transceiver, 1x9, uplink for the network connection, one PSE 10/100/1000Base-T copper port that provides Power-over-Ethernet (IEEE802.3af), and one 10/100/1000Mbps copper port. As a fiber-fed demarcation unit, it provides both power and data to a remote device over a standard CAT5 copper line, eliminating the need for a power connection to the remote device. The PoE Giga-MiniMc provisions up to 15.4 watts on one copper port, and can be powered by an external AC adapter or DC terminal block. For more robust power requirements on both copper ports, please refer to the information about the PoE+ Giga-MiniMc on Page 13.

The SFP uplink can support fiber or copper SFPs. The fiber SFP, available in SC or LC connectors, supports 100FDX or 1000FDX; a copper SFP supports the SGMII interface (10/100/1000Mbps). The SFP, with or without DDMI, is available for purchase through B&B Electronics Distributors. The SFP must be MSA-compliant.

The copper ports auto negotiate to the connected device's speed and duplex mode: 10 Mbps, 100 Mbps or 1000 Mbps, and HDX or FDX (including Flow Control). The

PoE Giga-MiniMc supports jumbo frames up to 10240.

#### NOTE

Unless noted otherwise, any reference is applicable for both the 1x9 and SFP version of the *PoE Giga-MiniMc* in this manual.

#### Installation

PoE Giga-MiniMc installs virtually anywhere: as a standalone, table-top device, on a DIN rail, or using a Wallmount bracket. As a standalone device, the end user can install PoE Giga-MiniMc in locations with extremely limited space. Velcro strips are also included to attach the device to most surfaces. The DIN Rail clips and Wallmount bracket are optional, available for purchase through B+B SmartWorx.

#### **Installation Tip**

Several models of the PoE Giga-MiniMc support single-strand fiber for operation. Since single-strand fiber products use optics that transmit and receive on two different wavelengths, single-strand fiber products must be deployed in pairs. For example, connect a PoE Giga-MiniMc, TX/SSLX-SM1310-SC (which has 1310 xmt and 1550 rcv) to a product which has 1550 xmt and 1310 rcv, e.g. PoE Giga-MiniMc, TX/SSLX-SM1550-SC. The two connected products must also have the same speed and distance capabilities (i.e. both are single-mode [20km] or both are single/PLUS [40km]).

## PoE Giga-MiniMc SFP



DIP Switch	Name	Description	Default Setting
1	PoE Reset	ON forces Port 2, PSE/PoE, to OFF on	
		LOS of Fiber input	OFF
2	Factory Set	Do not change	OFF
3	LoSPD	ON sets SFP for low speed operation	OFF
4	Factory Set	Do not change	OFF
5	Factory Set	Do not change	OFF
6	Factory Set	Do not change	OFF

## LoSPD DSW for PoE Giga-MiniMc

The DIP Switch for LoSPd is to allow the end user to set a speed for a fiber SFP under the following conditions:

- Setting the LoSPD DSW to ON will force the SFP to operate at 100Mbps.
   When set in the default of OFF, the SFP will run at it's maximum rate of the SFP installed.
- If a dual speed fiber SFP 100/1000Mbps is installed, setting the LoSpd to ON will force the SFP to operate at 100Mbps.

#### NOTE

Under no conditions will the LoSPd DSW impact any copper SFPs. Some 1000Mbps SFPs may not function properly when forced to 100Mbps.

#### PoE Reset DSW

When set to ON, it will force the PSE output power on the copper port OFF when the LINK state is lost on the SFP line (copper or fiber SFP). By default, the DSW is set to OFF.




DIP Switch	Name	Description	Default Setting
1	PoE Reset	ON forces Port 2, PSE/PoE, to OFF on	
		LOS of Fiber input	OFF
2	Factory Set	Do not change	OFF
3	LoSPD	ON sets SFP for low speed operation	OFF
4	Factory Set	Do not change	OFF
5	Factory Set	Do not change	OFF
6	Factory Set	Do not change	OFF

#### PoE Reset DSW

When set to ON, it will force the PSE output power on the copper port OFF when the LINK state is lost on the fiber segment. By default, the DSW is set to OFF.

The PoE Giga-MiniMc includes LEDs for three ports, as shown below:

# PoE Giga-MiniMc SFP

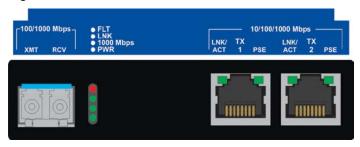


#### SFP LED Functions are as follows:

FLT	Glows red when a fault has been detected on the unit
LNK	Glows green with a valid link
1000 Mbps	Glows green when SFP is running at 1000Mbps
PWR	Glows green when unit is powered

#### **RJ-45 LED Functions are as follows:**

LNK/ACT (TX1, TX2)	Glows green with a valid link Blinks green when activity is detected
PSE (TX2)	Glows green when port is supplying PoE power  Blinks green during training and fault conditions: a series of two flashes indicates an overcurrent fault; a series of five flashes indicates invalid low or high discovery signature resistance  Off if the port is not supplying power
FDX (TX1)	Glows amber when port is running full duplex

# PoE Giga-MiniMc 1x9

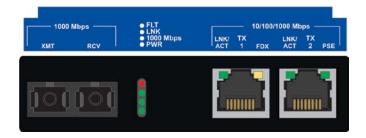

## 1x9 LED Functions are as follows:

FLT	Glows red when a fault has been detected on the unit
LNK	Glows green with a valid link
1000 Mbps	Glows green when is running at 1000Mbps
PWR	Glows green when unit is powered

#### **RJ-45 LED Functions are as follows:**

LNK/ACT (TX1, TX2)	Glows green with a valid link Blinks green when activity is detected
PSE (TX1, TX2)	Glows green when port is supplying PoE power  Blinks green during training and fault conditions: a series of two flashes indicates an overcurrent fault; a series of five flashes indicates invalid low or high discovery signature resistance  Off if the port is not supplying power
FDX (TX1)	Glows amber when port is running full duplex

#### **NOTE**

The fixed twisted pair port labeled PSE is the only port capable of providing Power Over Ethernet.

#### **Powering Option**

As a standalone unit, the PoE Giga-MiniMc uses a universal external desktop switching power adapter. The PoE Giga-MiniMc also includes a DC terminal block to support a voltage range of 45 to 57 VDC

PoE Giga-MiniMc supports two powering options.

- Desktop AC power adapter with country specific power cord (included)
- The 4-terminal DC power block

## **DC Terminal Block Wiring Instructions**

The PoE Giga-MiniMc can be powered via the DC terminal block. From a power source, connect to any one positive and any one negative terminal on PoE Giga-MiniMc.



PoE Giga-MiniMc

#### NOTE


When using stranded wire, the leads must be tinned, and equivalent to a 16 AWG solid conductor. The *PoE Giga-MiniMc* is protected against mis-wiring; if mis-wired the *PoE Giga-MiniMc* will not function. The *PoE Giga-MiniMc* cannot support - 48 VDC.

#### **DIN Rail and Wallmount Bracket**

The PoE Giga-MiniMc can be mounted with DIN Rail clips, a hardware option available through B+B SmartWorx. The DIN Rail clips include screws, to allow the installation onto a DIN Rail. Install the screws into DIN Rail clips, which should be mounted perpendicular to the DIN Rail. Snap the converter onto the clips. To remove the converter from the DIN Rail, use a flat-head screwdriver into the slot to gently pry the converter from the rail. In addition, a Wallmount bracket can be installed onto the PoE Giga-MiniMc.

#### **NOTE**

The DIN clips are designed for use on a DIN-35 rail.

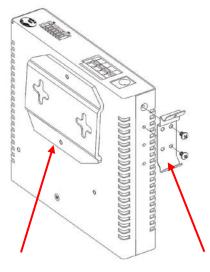

**Wallmount Bracket** 

**Din Rail Mounting** 

#### NOTE

The DIN clips are designed for use on a DIN-35 rail.

When using the side-installed location, remove the countersunk screw from the enclosure, and then use the vacated hole for one of the DIN clip screws.

## **DC Power Supply Precautions**

 
The following precautions should be observed when installing chassis with DC power supplies.

- 1. Check nameplate ratings to assure there is no overloading of supply circuits that could have an effect on overcurrent protection and supply wiring.
- 2. When installing 45 to 57 VDC rated equipment, it must be installed only per the following conditions:
  - Connect the equipment to a 45 to 57 VDC supply source that is electrically isolated form the alternating current source. The 45 to 57 VDC source must be connected to a 45 to 57 VDC SELV source.
  - b. The maximum terminal voltage is 57 VDC.
  - Input wiring to terminal block must be routed and secured in such a manner that it is protected from damage and stress. Do not route wiring past sharp edges or moving parts.
  - d. A readily accessible disconnect device, with a 3mm minimum contact gap, shall be incorporated in the fixed wiring.
- Grounding: reliable grounding of this equipment must be maintained.
  Particular attention should be given to supply connections when connecting
  to power strips, rather than direct connections to the branch circuit. The
  Negative Terminal is common to the grounded case.
- 4. -48 VDC cannot be supported.

# Troubleshooting

- PWR LED glows green when the unit is powered. If this LED is not lit, contact B+B SmartWorx Technical Support.
- If the PSE LED flashes twice, it may indicate an over current condition. The PSE LED should maintain solid green, to indicate consistent power. Check the PD device and its requirements.

The following table lists the pin configuration for the RJ-48 connector.



Pin#	Signal Name 1000M	Signal Direction 10/100M	PoE PoE+ (ALT-B)
1	TXD1+	Out*	
2	TXD1-	Out*	
3	RXD2+	IN*	
4	D3+		+V
5	D3-		+V
6	RXD2-	ln*	-
7	D4+		-V
8	D4-		-V

## Specifications for the PoE Giga-MiniMc

Multi-mode 1300nm Dual Fiber Single-mode 1310nm 1550nm Dual Fiber Single-mode 1310nm 1490nm Single-Strand Fiber Single-mode 1310nm 1550nm Single-Strand Fiber Copper 10/100/1000Mbps

#### **Ethernet Connections**

10/100/1000 BaseT Auto Negotiation AutoCross Flow Control 10240 MTU Full Line-Rate Forwarding

#### DC Input Voltage

45 VDC to 57 VDC on DC terminal block 48 VDC on DC jack

#### AC Desktop Adapter

Input: 100 to 240 ±10% VAC, 50/60H, 0.7A \*

Output: 48 VDC, 0.62A

\* Maximum input power in Watts is calculated by multiplying the input amps by the lowest input voltage.

## **Power Consumption**

21W max (PSE + PD) 5W max (PSE)

# **Operating Temperature**

+32°F to + 158°F (0°C to +70°C) DC terminal block +32°F to +122°F (0°C to +50°C) with B&B Electronics supplied AC desktop adapter

# Storage Temperature

-40°F to +185°F (-40°C to +85°C)

#### Humidity

5% to 95% (non-condensing); 0 to 10,000 ft. altitude

#### **Power Characteristics**

Consumes less than 10 watts (heating) plus PSE power IEEE802.3af Power to field < 15.4 watts Powered from external 48 VDC power lack

Powered from external 45 to 57 VDC 4-position terminal block
The input power terminals are isolated from the unit chassis

Threaded Chassis Grounding holes on unit for ground lug mounting

# **Standards Compliance**

IEEE 802.3af Power Over Ethernet IEEE 802.3 Ethernet Standards IEEE 802.3u Auto-Negotiation RFC-2474 RFC-2475 DiffServ QoS

#### About the PoE+ Giga-MiniMc

The PoE+ Giga-MiniMc is a solution for private network applications that require power over Ethernet for locations inside buildings where PoE is required to power an Ethernet device. The standalone unit offers a model with one SFP or fixed fiber transceiver, 1x9, uplink for the network connection, and two PSE 10/100/1000Base-T copper ports that provides Power-over-Ethernet (IEEE802.3af). As a fiber-fed demarcation unit, it provides both power and data to a remote device over a standard CAT5 copper line, eliminating the need for a power connection to the remote device. The PoE+ Giga-MiniMc provides up to 25.4 watts per copper port and is powered by an external AC adapter or DC terminal block.

The SFP uplink can support fiber or copper SFPs. The fiber SFP, available in SC or LC connectors, supports 100FDX or 1000FDX; a copper SFP supports the SGMII interface (10/100/1000Mbps). The SFP, with or without DDMI, is available for purchase through B&B Electronics Distributors. The SFP must be MSA-compliant.

The copper ports auto negotiate to the connected device's speed and duplex mode: 10 Mbps, 100 Mbps or 1000 Mbps, and HDX or FDX (including Flow Control). The PoE+ Giga-MiniMc supports jumbo frames up to 10240.

#### NOTE

Unless noted otherwise, any reference is applicable for both the 1x9 and SFP version of the *PoE+ Giga-MiniMc* in this manual.

#### Installation

PoE+ Giga-MiniMc installs virtually anywhere: as a standalone, table-top device, on a DIN rail or using a Wallmount bracket. As a standalone device, the end user can install PoE+ Giga-MiniMc in locations with extremely limited space. Velcro strips are also included to attach the device to most surfaces. The DIN Rail clips and Wallmount bracket are optional, available for purchase through an B+B SmartWorx.

## **Installation Tip**

Several models of the PoE+ Giga-MiniMc support single-strand fiber for operation. Since single-strand fiber products use optics that transmit and receive on two different wavelengths, single-strand fiber products must be deployed in pairs. For example, connect a PoE+ Giga-MiniMc, TX/SSLX-SM1310-SC (which has 1310 xmt and 1550 rcv) to a product which has 1550 xmt and 1310 rcv, e.g. PoE+ Giga-MiniMc, TX/SSLX-SM1550-SC. The two connected products must also have the same speed and distance capabilities (i.e. both are single-mode [20km] or both are single/PLUS [40km]).

## PoE+ Giga-MiniMc SFP



DIP	Name	Definition	Default
Switch			Setting
1	PoE Reset	ON forces Port 2 PoE OFF on LOS of Fiber	
	2	input	OFF
2	PoE Reset	ON forces Port 1 PoE OFF on LOS of Fiber	OFF
	1	input	
3	LoSpd	ON sets SFP for low speed operation	OFF
4	Factory Set	Do not change	OFF
5	Factory Set	Do not change	OFF
6	Factory Set	Do not change	OFF

## LoSPd DSW for PoE+ Giga-MiniMc

The DIP Switch for LoSPd is to allow the end user to set a speed for a fiber SFP under the following conditions:

- Setting the LoSPd DSW to ON will force the SFP to operate at 100Mbps.
   When set in the default of OFF, the SFP will run at it's maximum rate of the SFP installed.
- If a dual speed fiber SFP 100/1000Mbps is installed, setting the LoSpd to ON will force the SFP to operate at 100Mbps

#### NOTE

Under no conditions will the LoSPd DSW impact any copper SFPs. Some 1000Mbps SFPs may not function properly when forced to 100Mbps.

#### PoE Reset 1 and PoE Reset 2 DSW

When set to ON, it will force the PSE output power on the copper port OFF when the LINK state is lost on the fiber segment. By default, the DSW is set to OFF.




DIP	Name	Description	Default
Switch			Setting
1	PoE Reset	ON forces Port 2 PoE OFF on LOS of Fiber	
	2	input	OFF
2	PoE Reset	ON forces Port 1 PoE OFF on LOS of Fiber	
	1	input	OFF
3	Factory Set	Do not change	OFF
4	Factory Set	Do not change	OFF
5	Factory Set	Do not change	OFF
6	Factory Set	Do not change	OFF

#### PoE Reset 1 and PoE Reset 2 DSW

When set to ON, it will force the PSE output power on the copper port OFF when the LINK state is lost on the fiber segment. By default, the DSW is set to OFF.

The PoE+ Giga-MiniMc includes LEDs for three ports, as shown below:

# PoE+ Giga-MiniMc SFP

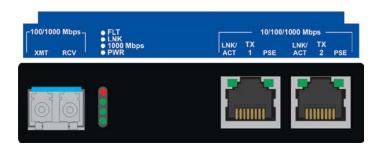

#### SFP LED Functions are as follows:

FLT	Glows red when a fault has been detected on the unit
LNK	Glows green with a valid link
1000 Mbps	Glows green when SFP is running at 1000Mbps
PWR	Glows green when unit is powered

#### **RJ-45 LED Functions are as follows:**

LNK/ACT	Glows green with a valid link
(TX1, TX2)	Blinks green when activity is detected
PSE	Glows green when port is supplying PoE power
(TX1, TX2)	Blinks green during training and fault conditions: a series of two flashes indicates an overcurrent fault; a series of five flashes indicates invalid low or high discovery signature resistance.
	Off if the port is not supplying power

# PoE+ Giga-MiniMc 1x9



## 1x9 LED Functions are as follows:

FLT	Glows red when a fault has been detected on the unit
LNK	Glows green with a valid link
1000 Mbps	Glows green to indicate is running at 1000Mbps
PWR	Glows green when unit is powered

## **RJ-45 LED Functions are as follows:**

LNK/ACT (TX1, TX2)	Glows green with a valid link Blinks green when activity is detected
PSE (TX1, TX2)	Glows green when port is supplying PoE power  Blinks green during training and fault conditions: a series of two flashes indicates an overcurrent fault; a series of five flashes indicates invalid low or high discovery signature resistance.  Off if the port is not supplying power

## **Powering Options**

As a standalone unit, the PoE+ Giga-MiniMc uses a universal external desktop switching power adapter. The PoE+ Giga-MiniMc also includes a DC terminal block to support a voltage range of 51 to 57 VDC.

PoE+ Giga-MiniMc supports two powering options.

- Desktop AC power adapter with country specific power cord (included)
- The 4-terminal DC power block

## **DC Terminal Block Wiring Instructions**

The PoE+ Giga-MiniMc can be powered via the DC terminal block. From a power source, connect to any one positive and any one negative terminal on PoE+ Giga-MiniMc.




PoE+ Giga-MiniMc

#### NOTE

When using stranded wire, the leads must be tinned, and equivalent to a 16 AWG solid conductor. The *PoE+ Giga-MiniMc* is protected against mis-wiring; if miswired the *PoE+ Giga-MiniMc* will not function. The *PoE+ Giga-MiniMc* cannot support -48 VDC.

The PoE+ Giga-MiniMc can be mounted with two DIN Rail clips, a hardware option available through B+B SmartWorx. The DIN Rail clips include screws, to allow the installation onto a DIN Rail. Install the screws into DIN Rail clips, which should be mounted perpendicular to the DIN Rail. Snap the converter onto the clips. To remove the converter from the DIN Rail, use a flat-head screwdriver into the slot to gently pry the converter from the rail. In addition, a Wallmount bracket can be installed onto the PoE+ Giga-MiniMc (optional purchase).

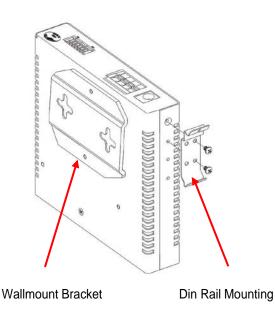

NOTE

The DIN clips are designed for use on a DIN-35 rail.

## **DC Power Supply Precautions**

The following precautions should be observed when installing chassis with DC power supplies.

 
- 1. Check nameplate ratings to assure there is no overloading of supply circuits that could have an effect on overcurrent protection and supply wiring.
- 2. When installing 51 to 57 VDC rated equipment, it must be installed only per the following conditions:
  - Connect the equipment to a 51 to 57 VDC supply source that is electrically isolated form the alternating current source. The 51 to 57 VDC source must be connected to a 51 to 57 VDC SELV source.
  - b. The maximum terminal voltage is 57 VDC.
  - Input wiring to terminal block must be routed and secured in such a manner that it is protected from damage and stress. Do not route wiring past sharp edges or moving parts.
  - d. A readily accessible disconnect device, with a 3mm minimum contact gap, shall be incorporated in the fixed wiring.
- Grounding: reliable grounding of this equipment must be maintained.
   Particular attention should be given to supply connections when connecting to power strips, rather than direct connections to the branch circuit. The Negative Terminal is common to the grounded case.
- 4. -48 VDC cannot be supported.

# Troubleshooting

If the PoE+ Giga-MiniMc is not responding to the power provided to it, the following conditions may be responsible:

- There may be an overcurrent condition; this is indicated on the PSE LED by a series of two flashes.
- There may be an invalid low or high discovery signature resistance; this is indicated on the PSE LED by a series of five flashes.
- If the PoE injector has power that can be verified, but the PSE LED is off, then contact B&B Electronics technical support.

The following table lists the pin configuration for the RJ-48 connector.



Pin#	Signal Name 1000M	Signal Direction 10/100M	PoE PoE+ (ALT- B)	Pin#
1	TXD1+	Out*		1
2	TXD1-	Out*		2
3	RXD2+	IN*		3
4	D3+		+V	4
5	D3-		+V	5
6	RXD2-	ln*		6
7	D4+		-V	7
8	D4-		-V	8

#### Specifications for the PoE+ Giga-MiniMc

Multi-mode 1300nm Dual Fiber Single-mode 1310nm 1550nm Dual Fiber Single-mode 1310nm 1490nm Single-Strand Fiber Single-mode 1310nm 1550nm Single-Strand Fiber Copper 10/100/1000Mbps

#### **Ethernet Connections**

10/100/1000 BaseT Auto Negotiation AutoCross Flow Control 10240 MTU Full Line-Rate Forwarding

#### DC Input Voltage

51 to 57 VDC on DC terminal block 51 to 57 VDC on DC jack

#### **AC Desktop Adapter**

Input: 100 to 240 ±10% VAC, 50/60H, 2A \*

Output: 52 VDC, 2.31A

\* Maximum input power in Watts is calculated by multiplying the input amps by the lowest input voltage.

## **Power Consumption**

65W max (PSE + PD) 5W max (PSE)

## **Operating Temperature**

+32°F to +158°F (0°C to +70°C) DC terminal block +32°F to +122°F (0°C to +50°C) with IMC supplied AC desktop adapter

## Storage Temperature

-40°F to +185°F (-40°C to +85°C)

## Humidity

5% to 95% (non-condensing); 0 to 10,000 ft. altitude

#### **Power Characteristics**

Consumes less than 10 watts (heating) plus PSE power IEEE802.3af/at Power to field < 50 watts (2 x 25.4 watts)
Powered from external 51 to 57 VDC power jack
Powered from external 51 to 57 VDC 4-position terminal block
The input power terminals are isolated from the unit chassis
Threaded Chassis Grounding holes on unit for ground lug mounting

## **Standards Compliance**

IEEE 802.3af Power Over Ethernet

IEEE 802.3at PoE+ Standards IEEE 802.3 Ethernet Standards IEEE 802.3u Auto-Negotiation RFC-2474 RFC-2475 DiffServ QoS

B+B SmartWorxs Products	Length of Warranty
SFPs	1 year
PoE+ Giga-MiniMc	6 year

NOTE
Please refer to the Warranty Section at the beginning of this manual for the full terms of the warranty.

# PoE Precautions (For Inside-a-Building Installation ONLY)

The PoE Giga-MiniMc and PoE+ Giga-MiniMc are for inside-a-building installation only. Both devices cannot be installed outside-a-building environment, as they cannot meet the PoE requirements, per the PoE standard. If installing the device outside, serious damage can occur and void the B+B SmartWorx' warranty.

## B+B SmartWorx Technical Support

**Tel:** (800) 346-3119 (in the U.S. and Canada)

Monday-Friday, 7:00am-7"00pm CST

+353 91 792444 (Europe)

Monday through Friday 8:00am - 5:00pm GMT

Fax: (815) 433-5109 U.S. and Canada

+353 91-792445 Europe

**E-Mail:** <a href="mailto:support@advantech-bb.com">support@advantech-bb.com</a> U.S. and Canada

techsupport@advantech-bb.com Europe

**Web:** www.advantech-bb.com

#### Fiber Optic Cleaning Guidelines

Fiber Optic transmitters and receivers are extremely susceptible to contamination by particles of dirt or dust, which can obstruct the optic path and cause performance degradation. Good system performance requires clean optics and connector ferrules.

- Use fiber patch cords (or connectors, if you terminate your own fiber) only from a reputable supplier; low-quality components can cause many hard-todiagnose problems in an installation.
- Dust caps are installed at B+B SmartWorx to ensure factory-clean optical devices. These protective caps should not be removed until the moment of connecting the fiber cable to the device. Should it be necessary to disconnect the fiber device, reinstall the protective dust caps.
- Store spare caps in a dust-free environment such as a sealed plastic bag or box so that when reinstalled they do not introduce any contamination to the optics.
- 4. If you suspect that the optics have been contaminated, alternate between blasting with clean, dry, compressed air and flushing with methanol to remove particles of dirt.

#### **Electrostatic Discharge Precautions**

Electrostatic discharge (ESD) can cause damage to any product, add-in modules or stand alone units, containing electronic components. Always observe the following precautions when installing or handling these kinds of products

- 1. Do not remove unit from its protective packaging until ready to install.
- 2. Wear an ESD wrist grounding strap before handling any module or component. If the wrist strap is not available, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.
- Hold the units by the edges; do not touch the electronic components or gold connectors.
- 4. After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the modules or stand alone units over any surface.



**WARNING!** Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

## Safety Certifications

UL/CUL: Listed to Safety of Information Technology Equipment, including Electrical Business Equipment.

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility (2004/108/EC) and the Council Directive on Electrical Equipment Designed for use within Certain Voltage Limits (2006/95/EC). Certified to Safety of Information Technology Equipment, Including Electrical Business Equipment. For further details, contact B+B SmartWorx.



Class 1 Laser product, Luokan 1 Laserlaite, Laser Klasse 1. Appareil A'Laser de Classe 1

European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.





# Powered by



# International Headquarters

B+B SmartWorx 707 Dayton Road Ottawa, IL 61350 USA

**Phone** (815) 433-5100 — **General Fax** (815) 433-5105

Email: <a href="mailto:support@advantech-bb.com">support@advantech-bb.com</a>
Website: <a href="mailto:support@advantech-bb.com">www.advantech-bb.com</a>

# European Headquarters

B+B SmartWorx
Westlink Commercial Park
Oranmore, Co. Galway, Ireland

Phone +353 91-792444 — Fax +353 91-79244S5







© 2016 B+B SmartWorx. All rights reserved.

The information in this document is subject to change without notice. B+B SmartWorx assumes no responsibility for any errors that may appear in this document. PoE Giga-MiniMc and PoE+ Giga-MiniMc is a trademark of B+B SmartWorx. Other brands or product names may be trademarks and are the property of their respective companies.

Document Number 57-80912-00 A1

February 2016