

Advantech AE Technical Share Document

| | | | |
|-----------------|--|--------------|-----------------------|
| Date | 2019/10/24 | Release Note | ■ Internal □ External |
| Category | □ FAQ ■ SOP | Related OS | Windows |
| Abstract | How to add hand strap on AIMx5,x8 series | | |
| Keyword | AIM8I, AIM10 | | |
| Related Product | AIM35,55,65 ; AIM38,58,68 | | |

■ Solution - Step by Step:

1. Check the Hand strap and 2 Screws are prepared
(PN: AIM-SRP0-0000 - AIM 8/10 hand strap)



2. Prepare ScrewDriver (50 or 100mm), Tweezers, and Hex Wrench (2mm).



3. Remove the cover of screws

-AIM-35/55/65AT Tablet PC



-AIM-38/58/68CT Tablet PC




4. Remove the two screws



5. Lock the Hand Strap screw with Hex wrench



-AIM-35/55/65AT Tablet PC

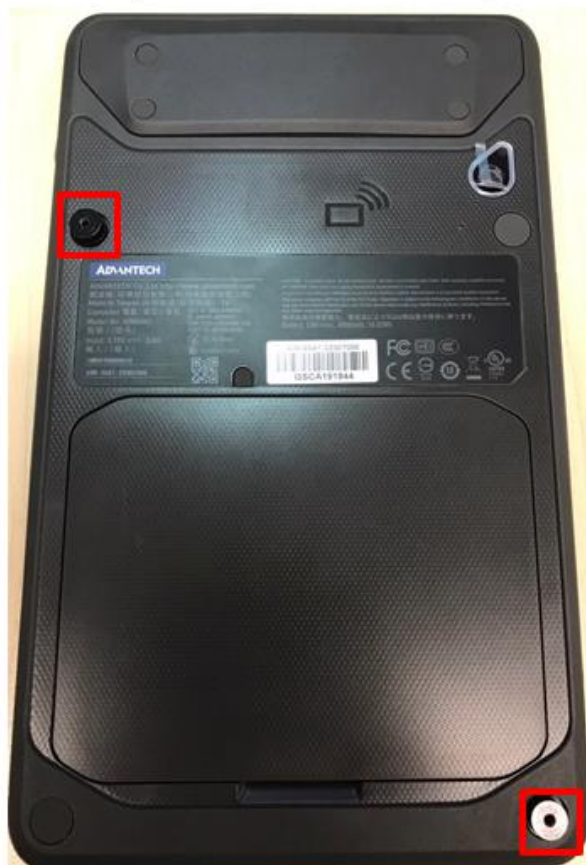

-AIM-38/58/68CT Tablet PC



6. Push Hand Starp into Screw with prarell direction force.



7. Push Hand Strap into Screw with parallel direction force, and push back to make it stable



8. Hand Strap with AIMx5 and AIMx8

-AIM-35/55/65AT Tablet PC



-AIM-38/58/68CT Tablet PC



9. For uninstall Hand Strap, please make sure the push out with prarell direction force.



■ Reference:

■ Contact Window and File Link:

If you have any questions, please contact Oscar.Liu #9592

You can download this file on [Global AE SharePoint - FAQ](#)