

Advantech AE Technical Share Document


Date	2019 / 08 / 28	Release Note	🗆 Internal 🔳 External
Category	■FAQ □SOP	Related OS	
Abstract	FAQ_How to use the GPIO function on PPC-31x0-RE9A?		
Keyword	GPIO		
Related Product	PPC-3100-RE9A, PPC-3120-RE9A		

Problem Description:

On PPC-3100-RE9A, we reserve a GPIO pin-header on M/B but there is no external connector for it.

1/0	5 x Serial ports: 4 x RS-232, 1 x isolated RS-422/485 (Adjustable through BIOS) 4 x USB 3.0 1 x Line-out, 1 x Mic-in 1 x VGA 1 x HDMI
	1 x GPIO (8 channels, TTL level, internal)

I/O View

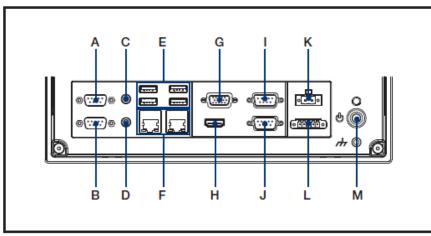

- A. COM4: RS-232
- B. COM5: RS-232
- C. Line Out
- D. Mic In
- E. 4 x USB 3.0
- F. 2 x LAN
- G. VGA

- H. HDMI
- I. COM1: RS-232
- J. COM2: RS-232
- K. DC Inlet and AT/ATX switch
- L. COM3: Isolated RS-422/485
- M. Power Button



Brief Solution:


If user needs GPIO feature, he has to manually switch the COM4 or COM5 cable to CN20, they are the same type connector

Please refer to Figure 1 & 2 for CN20 connector, figure 3 for connection, figure 4 for GPIO pin define.


<Figure 1>

Motherboard layout diagram		
Connectors	Functions	
CN1	LPC Conn.	
CN4	LCD Backlight	
CN7	SATA Power	
CN13	COM4	
CN14	COM5	
CN15	RS422/485	
CN16	COM1/COM2 Ring	
CN19	Speaker	
CN20	GPIO	


<Figure 2>

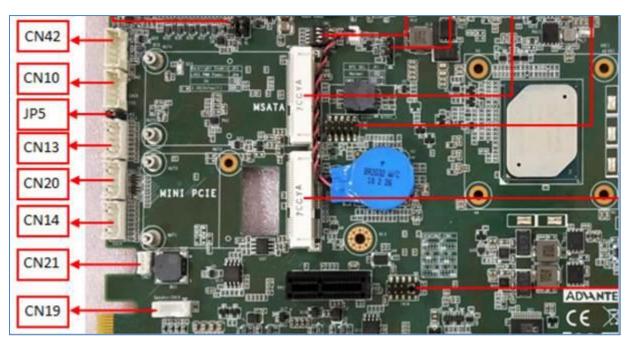



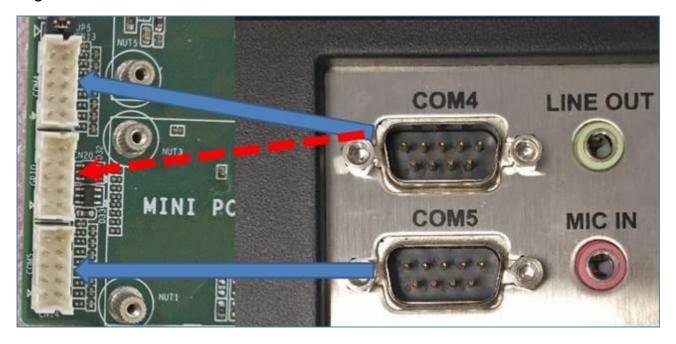

<Figure 4>

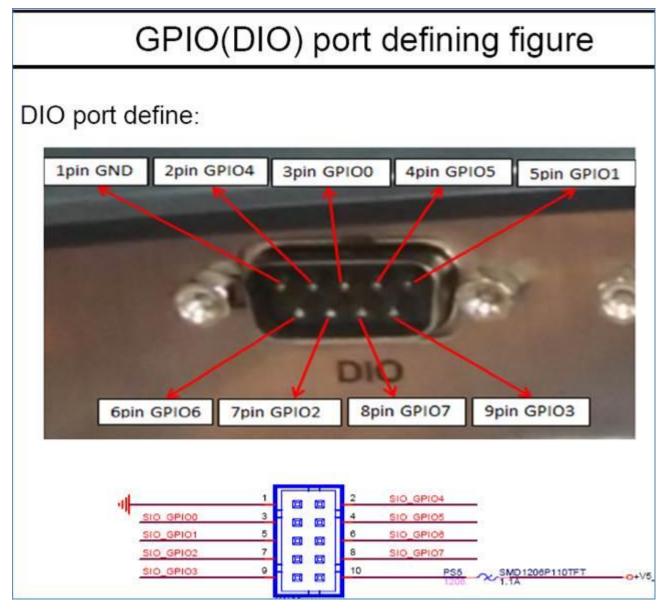



Enabling an Intelligent Planet

Please first search your model name from Support website, and then download GPIO utility from "<u>Software API</u>" page

https://www.advantech.com/support



Refine

Technical Downloads (25)

3D Model (3)

- Certificate (5)
- 🗌 Datasheet (5)
- Driver (3)

Manual (3)

✓ Software API (6)