Advantech AE Technical Sharing Documentation

Date	3/2/2023	SR#	1-3497971401
Category	■FAQ □ SOP	Related OS	Windows 10
Abstract	How to set Intel wake on LAN function under Windows 10?		
Keyword	UNO-2271, WOL, wake on LAN, Windows 10, WIN10		
Related Product	UNO, TPC, PPC,		

■ **Problem Description**:

How to set wake on LAN function under Windows 10?

■ Solution - Step by Step:


Step1

Enable the Wake On LAN from BIOS. Following is according to UNO-2271 BIOS list. When power on press "Delete" into BIOS setting \rightarrow Advanced \rightarrow LAN controller \rightarrow Wake on LAN enable \rightarrow enable.

 \rightarrow Save and exit.


Step2

Control Panel →Network and Internet→Network and sharing Center→Advanced sharing settings→Turn on network discovery→Turn on file and printer sharing→Save and change.

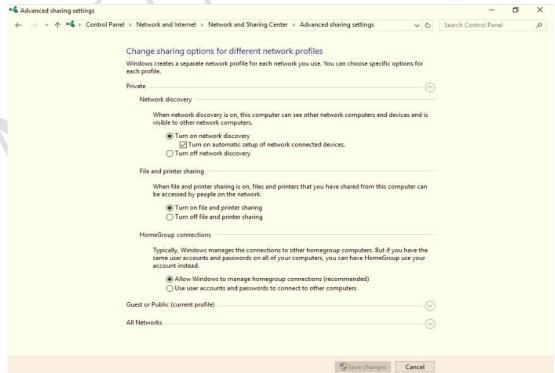

Step3

System Settings—Hardware and sound—Power Options—System Settings—Change settings that are currently unavailable—un-chick Turn on fast startup—save change.

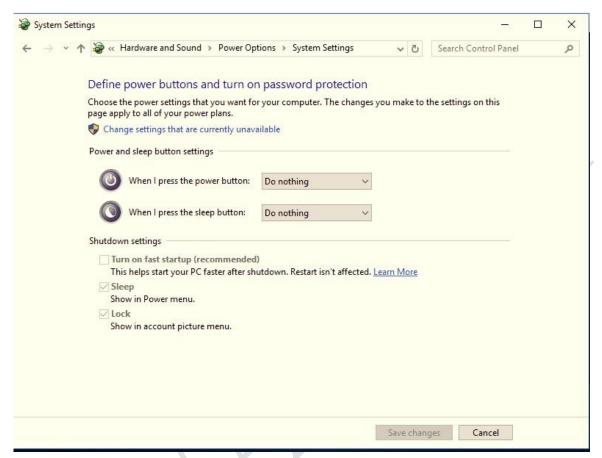

Step4


Device Management → found the LAN card → right click → properties → Power Management → check the box as following → OK.

Different Intel LAN driver versions may have different descriptions.

Allow this device to wake the computer




Enable PME Advanced -> Enable PME -> [Enabled]

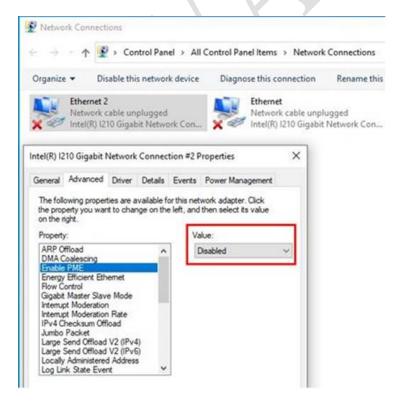

Wake on Magic Packet

Wake on Magic Packet from power off state

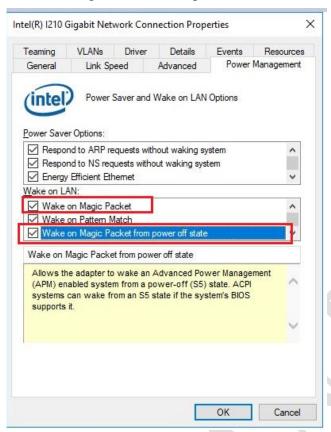

Step5

Open the CMD, type "ipconfig /all" to make sure your mac address and IP address. You will use the information when you WOL from other computer.

Step6

Connect the RJ-45 cables and ping each other to ensure the connection is successful.

```
Administrator Command Prompt

Microsoft Windows [Version 10.0.14393]
(c) 2016 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 10.0.0.2

Pinging 10.0.0.2 with 32 bytes of data:
Reply from 10.0.0.2: bytes=32 time<1ms TTL=128

Ping statistics for 10.0.0.2:

Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

Step7

You can wake On LAN by WakeMeOnLan Utility.

Make sure the every content is correct, and turn the target PC off to test the WOL function as following.

