

PCI-1753/1753E

96-channel Digital I/O card and its 96-channel Extension Card

PIN Assignment

PA00	1	51	PA20	PA00 ~ PA07 : I/O pins of Port A0
PA01	2	52	PA21	PA10 ~ PA17 : I/O pins of Port A1
PA02	3	53	PA22	PA20 ~ PA27 : I/O pins of Port A2
PA03	4	54	PA23	PA30 ~ PA37 : I/O pins of Port A3
PA04	5	55	PA24	PB00 ~ PB07 : I/O pins of Port B0
PA05	6	56	PA25	PB10 ~ PB17 : I/O pins of Port B1
PA06	7	57	PA26	PB20 ~ PB27 : I/O pins of Port B2
PA07	8	58	PA27	PB30 ~ PB37 : I/O pins of Port B3
PB00	9	59	PB20	PC00 ~ PC07 : I/O pins of Port C0
PB01	10	60	PB20	PC10 ~ PC17 : I/O pins of Port C1
PB02	11	61	PB22	PC20 ~ PC27 : I/O pins of Port C2
PB03	12	62	PB23	PC30 ~ PC37 : I/O pins of Port C3
PB04	13	63	PB24	GND : Ground
PB05	14	64	PB25	VCC : +5V voltage output (1A max.)
PB06	15	65	PB26	
PB07	16	66	PB27	
PC00	17	67	PC20	
PC01	18	68	PC21	
PC02	19	69	PC22	
PC03	20	70	PC23	
PC04	21	71	PC24	
PC05	22	72	PC25	
PC06	23	73	PC26	
PC07	24	74	PC27	
GND	25	75	GND	
PA10	26	76	PA30	
PA11	27	77	PA31	
PA12	28	78	PA32	
PA13	29	79	PA33	
PA14	30	80	PA34	
PA15	31	81	PA35	
PA16	32	82	PA36	
PA17	33	83	PA37	
PB10	34	84	PB30	
PB11	35	85	PB31	
PB12	36	86	PB32	
PB13	37	87	PB33	
PB14	38	88	PB34	
PB15	39	89	PB35	
PB16	40	90	PB36	
PB17	41	91	PB37	
PC10	42	92	PC30	
PC11	43	93	PC31	
PC12	44	94	PC32	
PC13	45	95	PC33	
PC14	46	96	PC34	
PC15	47	97	PC35	
PC16	48	98	PC36	
PC17	49	99	PC37	
VCC	50	100	VCC	