## SOP-PPC-L106 Setting COM2 Function in

## <u>BIOS</u>

- Step 1 . When the computer booting , press Keyboard "**DELETE**" button, it will enter the BIOS settings page, as shown below.
- Step 2 . Select "Integrated Peripherals", and then press "Enter" key to enter.



Step 3. Into the "Integrated Peripherals" page, index to move to "COM2 Flow Control", then press "Enter" key.

Note: "Enabled", meaning to open COM2 Auto-flow control function. "Disabled", meaning to close COM2 Auto-flow control function.



Step 4. The keyboard "**F10**" function key, save the settings and leave the BIOS settings page and complete the setup.

Step 5.If you want to change **COM2 Mode**, you need to disassemble back cover and I/O board.



Step 6.If you want to chang COM2 setting , please find connector "J6" , and chang this jump as below jumper setting.



Table 3.4: COM2 RS-232/422/485 setting (J6)

2	4	6	8	10	12	14	16	18
0	0	0	0	0	0	0	•	0
0	0	0	0	0	0	0	0	0
1	3	5	7	9	11	13	15	17

RS-422

\*RS-232

2	4	8	8	10	12	14	16	18
Ø.		0	0	0	•	0	0	0
0	6	0	0	0	0	0	0	0
1	3	5	7	9	11	13	15	17

**RS-485** 

	2	4	6	8	10	12	14	16	18
	Ø	0	0	0	0	0	0	0	•
	ð	0	0	0	0	0	0	0	0
Ţ	1	3	5	7	9	11	13	15	17

\* default setting