

Date	2015/07/21	SR#	1-2138219619
Category	<input type="checkbox"/> FAQ <input checked="" type="checkbox"/> SOP	Related OS	N/A
Abstract	How to Distinguish Between ADAM BE & CE HW Version		
Keyword	ADAM, HW Version, Hardware Version		
Related Product	ADAM-60XX Series		

### ■ Problem Description:

This document demonstrates the SOP of how to distinguish between ADAM BE & CE HW version

### ■ Brief Solution - Step by Step:

The easiest way of telling HW version of ADAM-60XX series between BE & CE is by looking at the FW version. That is:

- BE => FW 4.XX
- CE => FW 5.XX

Note: While performing FW update, there is built-in mechanism from preventing user updating incorrect F/W version with incorrect H/W version.

However, sometimes user might not able to login module, because of some uncertain issue. At this point, the only way of checking HW version is to note down the serial number and visit Advantech website, then input serial number accordingly as shown below.

[http://erma.advantech.com.tw/Cust/Request/Warranty\\_Lookup.asp](http://erma.advantech.com.tw/Cust/Request/Warranty_Lookup.asp)

**ADVANTECH**
*Enabling an Intelligent Planet*

[Home](#) | [MyAdvantech](#) | [Country / Region \[ Change \]](#)

[Products](#)
[Solutions](#)
[Partners](#)
[Support](#)
[Services](#)
[Contact](#)
 [iPlanet.Online/eStore](#)

[>> Home](#)

[Warranty Lookup](#)

Warranty Lookup

Barcode

IAA8050192

Search

Warranty Information

Serial Number:	IAA8050192	Product Name:	ADAM-6017-CE
Shipping Date:	2015-05-07	H/W Version:	A1-10
Warranty:	2015-05-07	BIOS:	
AGS:			