

Advantech AE Technical Share Document

Date	2015 / 09 / 03	SR#	1-2215189379
Category	<input checked="" type="checkbox"/> FAQ <input type="checkbox"/> SOP	Related OS	Microsoft Windows XP / 7 / 8
Abstract	How to do the analog output calibration (Auto)?		
Keyword	DAQNavi , analog output, calibration		
Related Product	DAQ devices		

■ **Problem Description:**

This document shows how user does the analog output calibration by itself.

■ **Brief Solution :**

Advantech’s DAQ provides utility software called DAQNavi Navigator, user can do calibration though utility. Please refer step as below:

Step 1: Choose the needed device and select “Device Setting” as Figure 1:

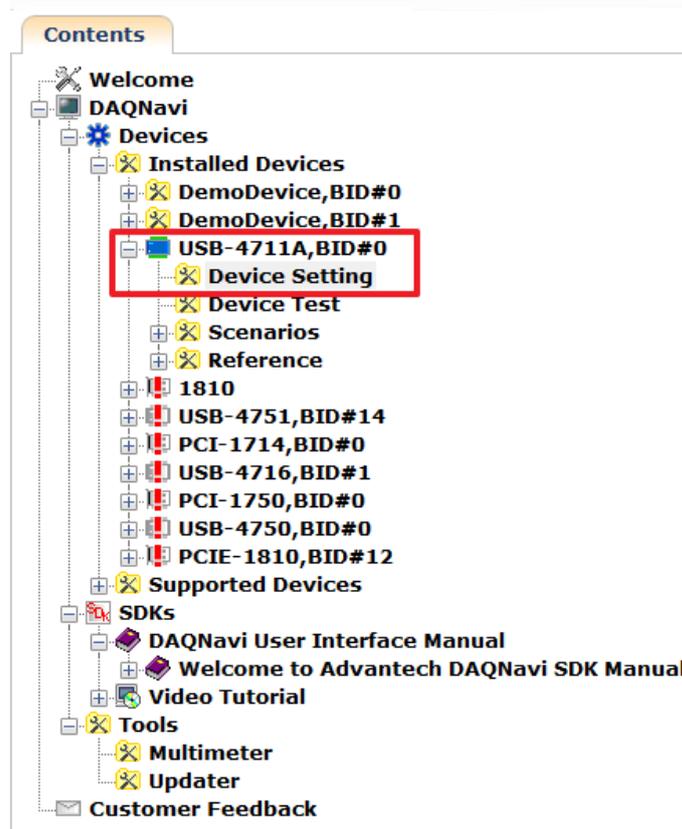


Figure 1. Choose the device

Step 2: Select “Analog output Calibration”, then press “Start” to do calibration, and follow the step with Navigator utility (on right side), please refer Figure 2.

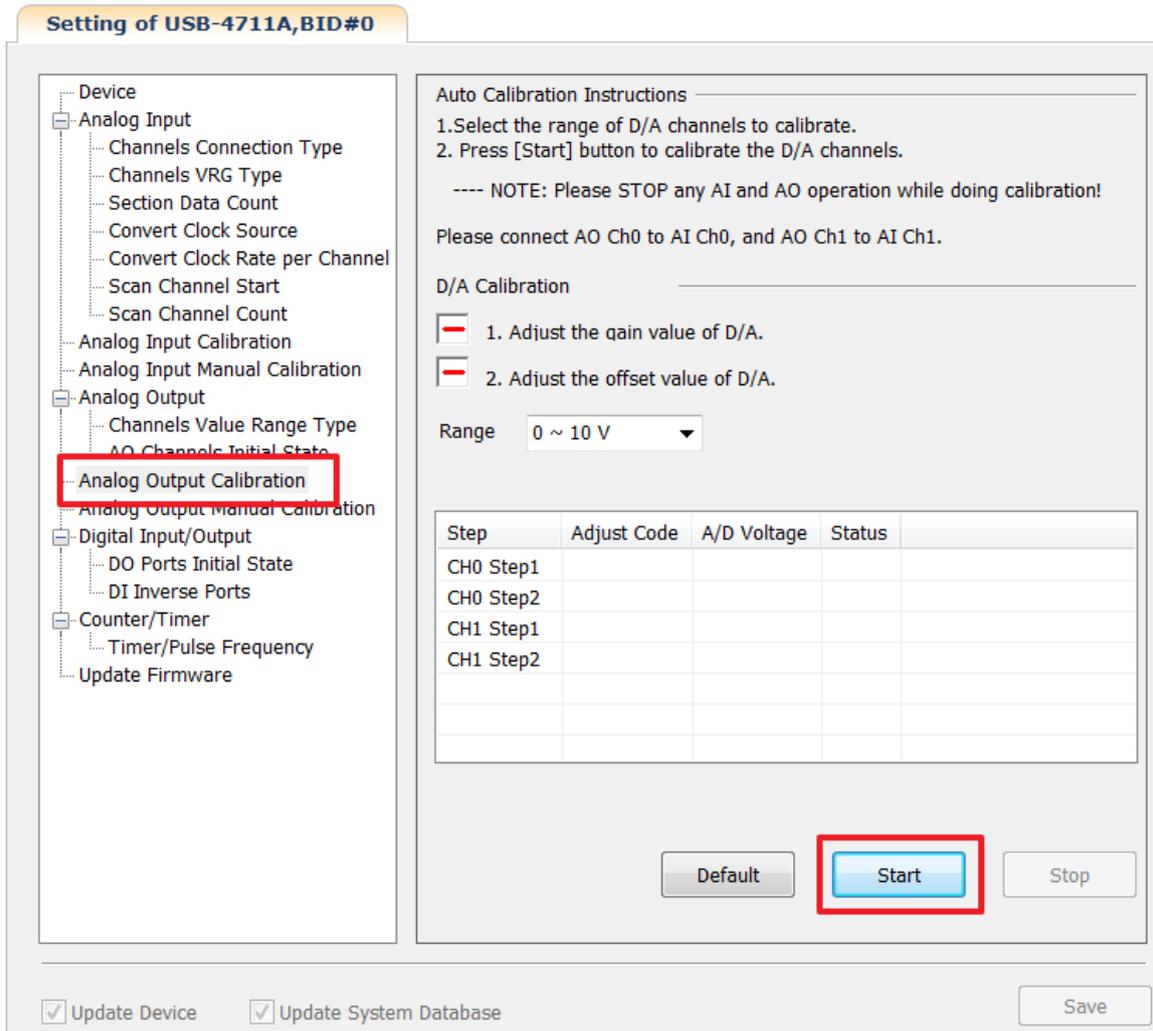


Figure 2. Analog output Calibration

- **Reference:**
 DAQNavigator Software Utility