

PCL-735

12-channel Relay
Actuator Card

Copyright

This documentation is copyrighted 1996 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assures no responsibility for its use, nor for any infringements of the rights of third parties which may result from its use.

Acknowledgments

PC-LabCard is a trademark of Advantech Co., Ltd. IBM and PC are trademarks of International Business Machines Corporation. MS-DOS, Microsoft C and Quick BASIC are trademarks of Microsoft Corporation. BASIC is a trademark of Dartmouth College. Intel is a trademark of Intel Corporation. TURBO C is a trademark of Borland International.

Contents

Chapter 1	General Information	1
	Introduction	2
	Features	2
	Applications	2
	Specifications	3
	Relay Output	3
	General	3
Chapter 2	Installation.....	5
	Initial Inspection	6
	Switch and Jumper Settings	7
	Base address selection (SW1)	8
	Hardware Installation	9
Chapter 3	Signal Connections	11
	Connector Pin Assignments	12
	Relay Output	13
Appendix A	Register Format	15
Appendix B	PC I/O Port Address Map	17

CHAPTER
1

General Information

Introduction

Ideal for applications such as device On/Off control or signal switching, the PCL-735 12-channel relay actuator provides 12 electromechanical SPDT relays on a half-size card.

To prevent relay fault, the On/Off status of each relay is easy to monitor. A red LED next to each relay shows its On/Off status, and the software can read each relay's status. Plus, an on-board DB-37 connector provides access to all output channels.

Features

- 12 relay outputs
- LED relay status indicators
- Male DB-37 matching connector included
- Relay status readback function

Applications

- Industrial On/Off control
- Signal switching
- External relay driving

Specifications

Relay Output

- **Relay type:** Single-pole double-throw (SPDT, Form C)
- **Output type:** Ch0 to Ch11, normally open/normally closed
- **Contact rating:** 2 A @ 30 V_{DC}, 1 A @ 125 V_{AC}
- **Breakdown voltage:** 1000 V AC/DC min.
- **Relay on time:** 5 msec. typical
- **Relay off time:** 5 msec. typical
- **Total switching time:** 10 msec. typical
- **Insulation resistance:** 1000 MW @ 500 V_{DC} min.
- **Life expectancy:**
 - > 5 x 10⁵ operations @ 30 V_{DC} and 2 A
 - > 2 x 10⁶ operations @ 30 V_{DC} and 1 A

General

- **Dimensions:** 6.07" x 3.89" (155 mm x 99 mm)
- **I/O port address:** Two consecutive bytes from hex 200 to 3F8
- **Power consumption:** +5 V @ 200 mA, +12 V @ 200 mA max.

C H A P T E R

2

Installation

Initial Inspection

We carefully inspected the PCL-735 both mechanically and electrically before shipment. It should be free of marks and in perfect order on receipt.

As you unpack the PCL-735, check it for signs of shipping damage (damaged box, scratches, dents, etc.). If it is damaged or fails to meet specifications, notify our service department or your local sales representative immediately. Also, call the carrier immediately and retain the shipping carton and packing material for inspection by the carrier. We will then make arrangements to repair or replace the unit.

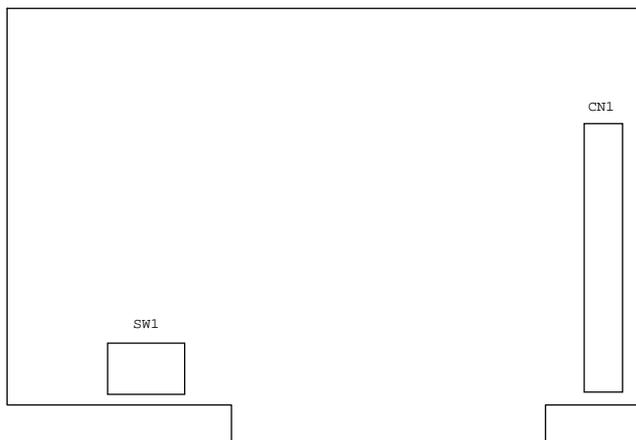
Discharge any static electricity on your body before you touch the board by touching the back of the system unit (grounded metal).

Remove the PCL-735 card from its protective packaging by grasping the rear metal panel. Handle the card only by its edges to avoid static electric discharge which could damage its integrated circuits. Keep the antistatic package. Whenever you remove the card from the PC, please store the card in this package for protection.

You should also avoid contact with materials that hold static electricity such as plastic, vinyl and styrofoam.

Switch and Jumper Settings

The PCL-735 card has one function switch (SW1). The following sections tell how to configure the card. Refer to the figure below for help identifying card components.



Switch and Connector Locations

Switches and Connectors

Label	Function
CN1	Relay output
SW1	Card base address

Base address selection (SW1)

You control the PCL-735's operation by reading or writing data to the PC's I/O (input/output) port addresses. The PCL-735 requires two consecutive address locations. Switch SW1 sets the card's base (beginning) address. Valid base addresses range from Hex 200 to Hex 3F0. Other devices in your system may, however, be using some of these addresses.

We set the PCL-735 for a base address of Hex 300 at the factory. If you need to adjust it to some other address range, set switch SW1 as shown in the following table:

Card I/O addresses (SW1)								
Range (hex)	Switch position							
	1	2	3	4	5	6	7	8
200 - 203	○	●	●	●	●	●	●	●
204 - 207	○	●	●	●	●	●	●	○
...								
* 300 - 303	○	○	●	●	●	●	●	●
...								
3F0 - 3F3	○	○	○	○	○	○	●	●

○ = Off ● = On * = default

Note: Switches 1-8 control the PC bus address lines as shown below:

Switch	1	2	3	4	5	6	7	8
Line	A9	A8	A7	A6	A5	A4	A3	A2

Appendix A provides a PC I/O port address map to help you avoid the I/O addresses for standard PC devices.

Hardware Installation

Warning! *TURN OFF your PC power supply whenever you install or remove the PCL-735 or connect and disconnect cables.*

- 1 Turn the computer off. Turn the power off to any peripheral devices such as printers and monitors.
- 2 Disconnect the power cord and any other cables from the back of the computer.
- 3 Remove the system unit cover (see the user's guide for your chassis if necessary).
- 4 Locate the expansion slots at the rear of the unit and choose any unused slot.
- 5 Remove the screw that secures the expansion slot cover to the system unit. Save the screw to secure the interface card retaining bracket.
- 6 Carefully grasp the upper edge of the PCL-735 card. Align the hole in the retaining bracket with the hole on top of the expansion slot and align the gold striped edge connector with the expansion slot socket. Press the board firmly into the socket.
- 7 Secure the PCL-735 using the screw you removed in step 5.
- 8 Attach any accessories (using 20 pin flat cables, a DB-37 cable, etc.) to the PCL-735.
- 9 Replace the system unit cover. Connect the cables you removed in step 2. Turn the computer power on.

C H A P T E R

3

Signal Connections

Good signal connections can avoid a lot of unnecessary damage to your valuable PC and other hardware. This chapter gives pin assignments for each of the card's connectors and signal connections for different applications.

Connector Pin Assignments

The PCL-735 has a DB-37 connector accessible from the card bracket.

Abbreviations

NO	Normally open
NC	Normally closed
COM	Common relay pin

ONI Pin Assignments

NO0	1	20	NO6
COM0	2	21	COM6
NC0	3	22	NC6
NO1	4	23	NO7
COM1	5	24	COM7
NC1	6	25	NC7
NO2	7	26	NO8
COM2	8	27	COM8
NC2	9	28	NC8
NO3	10	29	NO9
COM3	11	30	COM9
NC3	12	31	NC9
NO4	13	32	NO10
COM4	14	33	COM10
NC4	15	34	NC10
NO5	16	35	NO11
COM5	17	36	COM11
NC5	18	37	NC11
N/A	19		

APPENDIX
A

Register Format

Programming the PCL-735 is extremely simple. Each I/O channel corresponds to a bit in the card's registers. To turn on an output channel you write a '1' to the corresponding bit.

The card requires four I/O register addresses. The address of each register is specified as an offset from the card's base address. For example, BASE+0 is the card's base address and BASE+2 is the base address + two bytes. If the card's base address is 300h, the register's address is 302h. See Chapter 2 for information on setting the card's base address.

Register Assignments

Address	Write	Read
BASE+0	DO bits 0-7	DI bits 0-7 status
BASE+1	DO bits 8-11	DI bits 8-11 status
BASE+2	—	—
BASE+3	—	—

Register format

BASE+0


D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----


BASE+1

N/A	N/A	N/A	N/A	D11	D10	D9	D8
-----	-----	-----	-----	-----	-----	----	----

Relay status for D_n

Setting	Status
---------	--------

0	 com ———  N.C.  N.O.
---	---

1	 com ———  N.C.  N.O.
---	---

APPENDIX

B

PC I/O Port Address Map

PC I/O port address map

Range (hex)	Function
000 - 1FF	Base system
200	Reserved
201	Game control
202 - 277	Reserved
278 - 27F	LPT2: (2nd printer port)
280 - 2F7	Reserved
2F8 - 2FF	COM2:
300 - 377	Reserved
378 - 37F	LPT1: (1st printer port)
380 - 3AF	Reserved
3B0 - 3BF	Mono Display/Print adapter
3C0 - 3CF	Reserved
3D0 - 3DF	Color/Graphics
3E0 - 3EF	Reserved
3F0 - 3F7	Floppy disk drive
3F8 - 3FF	COM1:
