

## Advantech AE Technical Share Document

<b>Date</b>	2017/02/02	<b>SR#</b>	1-2774002608
<b>Category</b>	■FAQ □SOP	<b>Related OS</b>	N/A
<b>Abstract</b>	APAX-5580, Print screen on Target Visualization		
<b>Keyword</b>	CODESYS, Target Visualization, PrintScreen		
<b>Related Product</b>	APAX-5580-CDS		

### ■ Problem Description:


In a customer's application system structure, they want to use APAX-5580CDS as a data-logger.

The customer needs to show some trends on the target visualization and to have the ability to print it out with a clicking on the button of a visualization button.

In this FAQ we will explain how to do so with proper setting in the CODESYS.

## ■ Answer:

First of all, we could add a “Button” in the visualization and the configure its “Inputconfiguration” as shown in *Figure 1*.

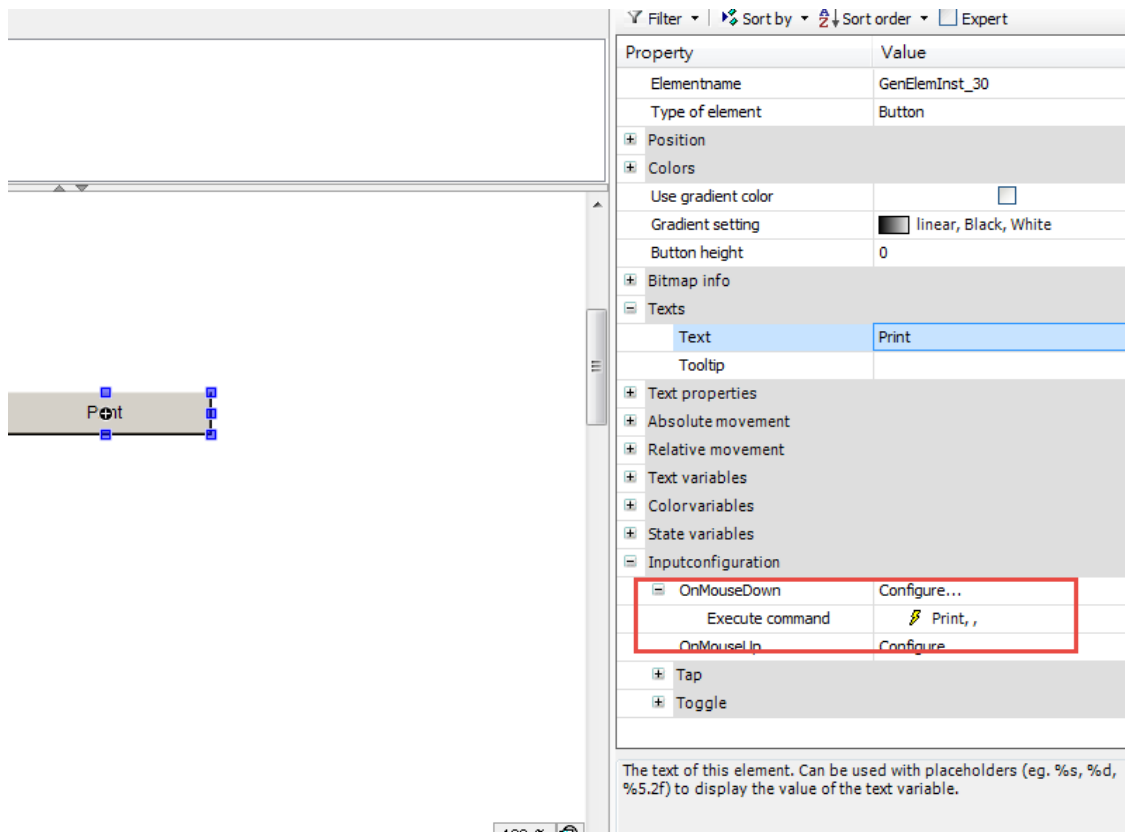


*Figure 1*

We configured “OnMouseDown” here so that the screenshot will be printed out when the mouse is pressed on the button.

In the “Input Configuration” window, please select “Execute command” and then configure the command as “Print” as shown in *Figure 2*.

Now in the visualization page, once the button is being pressed, the configuration window for printer setting will pop-out, with the proper selection, the screenshot of the visualization page will be printed out.

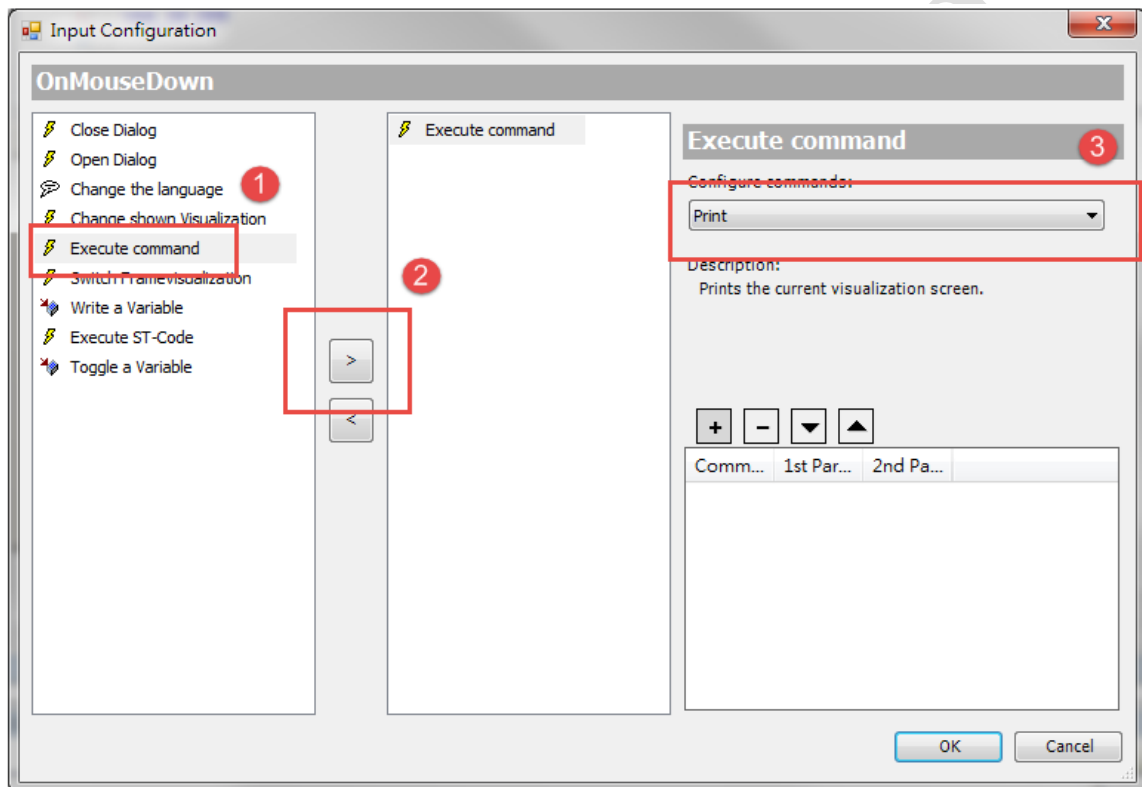

*Figure 2*