

PCA-6028**LGA1150 Intel® Core™ i7/i5/i3/Pentium®/PICMG 1.0
Single Board Computer with DDR3/Dual GbE LAN
Startup Manual****Packing List**

Before you begin installing your card, please make sure that the following items have been shipped:

1. PCA-6028 PICMG 1.0 Single Board Computer
2. 1 x PCA-6028 Startup Manual
3. 1 x CD with utility
4. 2 x Serial ATA HDD data cables
5. 1 x Serial ATA HDD power cable
6. 1 x COM port cable kit
7. 1 x 4-port USB cable kit
8. 1 x keyboard and mouse Y cable
9. 1 x jumper package
10. 1 x warranty card

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Note 1: For detailed contents of PCA-6028, please refer to the user manual in the enclosed CD-ROM (in PDF format).

Note 2: Acrobat Reader is required to view any PDF file. Acrobat Reader can be downloaded at: get.adobe.com/reader (Acrobat is a trademark of Adobe)

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://support.advantech.com.tw/support/default.aspx>

This manual is for the PCA-6028 Series Rev. A3.

Part No. 2006602803

Printed in China

4th Edition
October 2022

Specifications**General**

- **CPU:** LGA1150 Intel® Core™ i7/i5/i3/Pentium®
- **BIOS:** AMI 128 Mb SPI BIOS
- **Chipset:** Intel® H81
- **System memory:** Dual channel 2x 240-pin DDR3 1333/1600 8 GB per DIMM without ECC; max. capacity up to 16 GB
- **SATA ports:** 1 x SATAII, 2 x SATAIII, 1 x mSATA
Note 1: SATA3.0: 600MB/sec; SATA2.0:300MB/sec
- **Serial ports:** Two RS-232 with pin headers
- **Keyboard/mouse connector:** Supports one standard PS/2 keyboard and mouse connector and one external 6-pin header
- **Watchdog timer:** 255 level timer intervals
- **USB 2.0:** Up to 8 (6 x pin header, 1 x vertical type A, 1 x rear in G2 SKU only)
- **USB 3.0:** 2x pin header
- **GPIO:** One programmable 8-bit GPIO pin-header

VGA Interface

- **Chipset:** Intel® HD graphics
- Shared system memory is subject to OS

Ethernet Interface

- **Chipset Supports:**
 - LAN1: Intel® I217V
 - LAN2: Intel® I210
- **Connection:** 2 on-board RJ-45 connectors with LED indicators"

Mechanical and Environmental

- **Dimensions:** (L x W): 338 x 122 mm
- **Power supply voltage:** +12 V, +5 V, +5 VSB
- **Power requirements:**
 - Core™ i7-4790S@3.20GHz; 8GB DDR3 1600 2Rx8*2; SATA HDD*1
 - Voltage: +12 V, +5 V, +3.3 V, +5 Vsb, -12 V, -5 V
 - Current: 4.94 A, 1.83 A, 0 A, 0.01 A, 0 A, 0 A
- **Operating temperature:** 0 ~ 60 °C (depending on CPU)
- **Weight:** 0.5 kg (weight of board)

Jumpers and Connectors

The board has a number of jumpers that allow you to configure your system to suit your application. The table below lists the function of each of the jumpers and connectors.

Connectors	
Label	Function
LPT1	Parallel port, parallel port x 1, supports SPP/EPP/ECP mode
LAN1	Intel® I217V
LAN2	Intel® I210 (G2 sku only)
VGA1	VGA connector
KBMS1	PS/2 keyboard and mouse connector
KBMS2	External keyboard/mouse connector
COM1	Serial port: COM1; RS-232 (9-pin Box Header)
COM2	Serial port: COM2; RS-232 (9-pin Box Header)
JIR	Infrared connector
JFP3 (Keyboard Lock and Power LED)	Power LED
	Suspend: Fast flash (ATX/AT)
	System On: ON (ATX/AT)
	System Off: OFF (ATX/AT)
JFP2	External speaker/SATA HDD LED connector
JFP1	Power switch/Reset connector
JCASE1	Case open
CPUFAN1	CPU FAN connector (4-pin)
LANLED1	LAN1/2 LED extension connector
HDAUD1	HD audio extension module connector
USB01	USB port 0, 1 (3.0)
USB23	USB port 2, 3
USB45	USB port 4,5
USB8	USB port 8 (G2 SKU only)
USB9	USB port 9
USB1011	USBport 10, 11
SATA1	Serial ATA1 (3.0)
SATA2	Serial ATA2 (3.0)
SATA3	Serial ATA3
CPU1	CPU socket
DIMMA1	Memory connector channel A
DIMMB1	Memory connector channel B
GPIO1	GPIO pin header (SMD pitch-2.0 mm)
LPC1	COM port module expansion pin-header

Jumpers and Connectors (Cont.)

DVI1	DVI connector
MINIPCIE1	mSATA connector
SMBUS1	SMBus connector
ATX12V1	12V connector
ATXF1	ATX power connector

Jumpers

Label	Function
JCMOS1	CMOS clear
JME1	Clear ME data
JWDT	Watchdog timer output selection
JOBS1	HW monitor alarm



JCMOS1/JME1: Clear CMOS/ME Data

Closed Pins	Result
1-2	Keep CMOS/ME data (Default)
2-3	Clear CMOS/ME data



Closed



Open

H/W Monitor Alarm (JOBS1)

Function	Jumper Setting
Closed	Enable OBS alarm (Default)
Open	Disable OBS alarm



JWDT1: Watchdog Timer Output Option

Closed Pins	Result
1-2	Reserved
2-3	System reset (Default)



JERP1: Deep Sleep S5

Closed Pins	Result
1-2	Enabled
2-3	Disabled (Default)

Software Installation

The drivers for the PCA-6028 are located on the software installation CD. Please click through the folder and follow the screen instructions to install them.

Caution! The computer is supplied with a battery-powered real-time clock circuit. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



Declaration of Conformity

This device complies with the requirements in Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference;
2. This device must accept any interference received, including interference that may cause undesired operation.

Board Layout

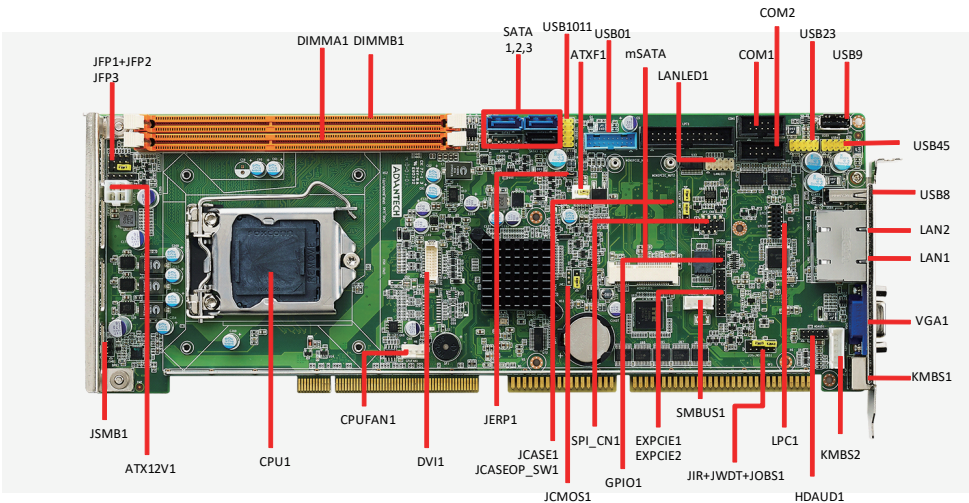


Figure 1: Board Layout: Jumper and Connector Locations